

## PROBLEM SYMPTOMS TABLE

Symptoms	Suspected Area	See Page
AUTO UP/DOWN function does not operate	<ol style="list-style-type: none"> <li>1. Power window regulator motor assy front LH</li> <li>2. Wire harness</li> <li>3. Power window regulator master switch assy</li> </ol>	<a href="#">05-2035</a>
Remote UP/DOWN function does not operate	<ol style="list-style-type: none"> <li>1. Power window regulator master switch assy</li> <li>2. Wire harness</li> </ol>	<a href="#">05-2038</a>
Manual UP/DOWN function does not operate on driver side	<ol style="list-style-type: none"> <li>1. FR DOOR fuse</li> <li>2. Power window regulator master switch assy</li> <li>3. Power window regulator motor assy front LH</li> <li>4. Wire harness</li> </ol>	<a href="#">05-2041</a>
Manual UP/DOWN function does not operate on passenger side only	<ol style="list-style-type: none"> <li>1. Power window regulator switch assy front RH</li> <li>2. Power window regulator motor assy front RH</li> <li>3. Wire harness</li> </ol>	<a href="#">05-2044</a>
Manual UP/DOWN function does not operate on rear LH side	<ol style="list-style-type: none"> <li>1. Power window regulator switch assy rear LH</li> <li>2. Power window regulator motor assy rear LH</li> <li>3. Wire harness</li> </ol>	<a href="#">05-2047</a>
Manual UP/DOWN function does not operate on rear RH side	<ol style="list-style-type: none"> <li>1. Power window regulator switch assy rear RH</li> <li>2. Power window regulator motor assy rear RH</li> <li>3. Wire harness</li> </ol>	<a href="#">05-2050</a>
Jam protection function does not operate	<ol style="list-style-type: none"> <li>1. Power window regulator master switch assy</li> </ol>	<a href="#">05-2062</a>
Power windows do not operate at all	<ol style="list-style-type: none"> <li>1. AM1 fuse</li> <li>2. GAUGE fuse</li> <li>3. POWER fuse</li> <li>4. ECU-IG fuse</li> <li>5. FR DOOR fuse</li> <li>6. PWR relay</li> <li>7. IG1 relay</li> <li>8. Power window regulator master switch assy</li> <li>9. Wire harness</li> <li>10. Multiplex network body ECU</li> </ol>	<a href="#">05-2053</a>
Power window can be operated after power switch's power mode is changed to OFF even when certain conditions are not met	<ol style="list-style-type: none"> <li>1. Power window regulator master switch assy</li> <li>2. Front door courtesy lamp switch</li> <li>3. Wire harness</li> <li>4. Multiplex network body ECU</li> </ol>	<a href="#">05-2057</a>
AUTO UP operation does not fully close power window (jam protection function is activated)	<ol style="list-style-type: none"> <li>1. Front door window regulator assy</li> <li>2. Power window regulator motor assy front LH</li> <li>3. Power window regulator master switch assy</li> </ol>	<a href="#">05-2060</a>