

DATA LIST/ACTIVE TEST

1. DATA LIST

HINT:

Using the hand-held tester DATA LIST allows switch, actuator and other item values to be read without removing any parts. Reading the DATA LIST early in troubleshooting is one way to shorten labor time.

- (a) Connect the hand-held tester (with CAN VIN) to the DLC3.
- (b) Change the power switch's power mode to ON (IG) by pushing the power switch.
- (c) Read the DATA LIST according to display on the tester.

Transponder key ECU:

| Item | Measurement Item/Display (Range) | Normal Condition | Diagnostic Note |
|-----------------|----------------------------------|--|-----------------|
| KEY UNLK WRN SW | Halfway switch signal /ON or OFF | ON: Key is in key slot. OFF: No key is in key slot. | – |

Multiplex network body ECU:

| Item | Measurement Item/Display (Range) | Normal Condition | Diagnostic Note |
|--------------|--|---|-----------------|
| D DOR CTY SW | Driver side door courtesy switch signal /ON or OFF | ON: Driver side door is open. OFF: Driver side door is closed. | – |