

ON-VEHICLE INSPECTION

1. CHECK FUNCTION

- (a) Check the key reminder warning buzzer sound function.
 - (1) Close the driver side door, insert the key into the key slot and change the power switch's power mode to OFF by pressing the power switch.
 - (2) Open the driver side door. Check that the key reminder warning buzzer emits sounds intermittently.
- (b) Check that the key reminder warning buzzer stops.
 - (1) While the buzzer is sounding, perform one of the following operations:
 - Close the driver side door (front door courtesy lamp switch is turned off).
 - Change the power switch's power mode to ON (IG) by pressing the power switch.
 - Pull out the key from the key slot.
 - (2) Check that the key reminder warning buzzer stops sounding.