

**PROBLEM SYMPTOMS TABLE**

Symptom	Suspected Area	See page
P position switch indicator light does not come on.	1. P position switch indicator light circuit 2. Transmission control ECU assy	<a href="#">05-1199</a> –
P position switch indicator light does not go off.	1. P position switch indicator light circuit 2. Transmission control ECU assy	<a href="#">05-1199</a> –