

PROBLEM SYMPTOMS TABLE

Problem Symptom	Suspected Area	See Page
Hybrid control system does not start	1. ECU power source circuit 2. Push button start system	05-2417 05-2420