

<b>DTC</b>	<b>P0A37/260</b>	<b>GENERATOR TEMPERATURE SENSOR CIRCUIT RANGE/PERFORMANCE</b>
------------	------------------	---

## CIRCUIT DESCRIPTION

Refer to DTC P0A38 (INF 257) on page [05-537](#).

DTC No.	INF Code	DTC Detection Condition	Trouble Area
P0A37	260	Motor temperature sensor No. 2 performance problem	<ul style="list-style-type: none"> <li>• Hybrid vehicle motor</li> <li>• Transaxle fluid leakage</li> <li>• HV transaxle assembly</li> </ul>

## INSPECTION PROCEDURE

<b>1</b>	<b>CHECK TRANSAXLE FLUID LEVEL (See page <a href="#">22-1</a>)</b>
----------	--

(a) Check if the transaxle is filled with fluid to the specified level.

**OK: The transaxle is filled with fluid to the specified level**

HINT:

The motor temperature sensor No. 2 is unavailable as an individual service part. Therefore, when replacing it, the hybrid vehicle motor must be replaced.

<b>NG</b>	<b>REPAIR OIL LEAKAGE, OR REPLACE HYBRID VEHICLE TRANSAXLE</b>
-----------	--

**OK**

<b>REPLACE HYBRID VEHICLE MOTOR ASSY</b>
--