

DTC	P0A51/174	DRIVE MOTOR "A" CURRENT SENSOR CIRCUIT
-----	-----------	--

CIRCUIT DESCRIPTION

The HV control ECU performs self-checks to detect an internal operating malfunction in the ECU.

DTC No.	INF Code	DTC Detection Condition	Trouble Area
P0A51	174	HV control ECU internal error	•HV control ECU

INSPECTION PROCEDURE

If the information (INF) code is present, replace the HV control ECU.

REPLACE HYBRID VEHICLE CONTROL ECU (See page [21-124](#))