

## CUSTOMIZE PARAMETERS

### HINT:

The items in the table on the next page can be customized.

### NOTICE:

- **When the customer requests a change in a function, first make sure that customization of the function(s) is possible.**
- **Be sure to record the current setting before customizing.**
- **When troubleshooting a function, first make sure that the function is not set to OFF.**

**Smart Entry System:**

Display (Item)	Default	Contents	Setting
SMART WARN 1 (Warn key is taken from D–door with P position)	ON	Function that warns driver that key is taken out from driver's door when shift position is in P and power switch is not OFF	ON/OFF
SMART WARN 2 (Warn key is taken from D–door without P position)	ON	Function that warns driver that key is taken out from driver's door when shift position is not in P and power switch is not OFF	ON/OFF
SMART WARN 3 (Warn key is taken out by other passengers)	ON	Function that warns driver that key is taken out from any door except driver's door by passenger when power switch is not OFF	ON/OFF
SMART BUZ NUM (Setting number of warning buzzer sounds)	3 TIMES	Function that sets number of warning buzzer sounds when key is taken out of vehicle	OFF/ 3TIMES/5TIMES/7TIMES
SMART WARN 4 (Warn locking door when Engine is idling)	2s	Function that sets warning time for locking doors while engine is idling	OFF/1s/2s
SMART WARN 5 (Warn when key is left in vehicle)	2s	Function that sets warning time for locking doors while key is inside vehicle	OFF/1s/2s
SMART WARN 6 (Warn starting E/G when key is out of detection range)	ON	Function that warns driver that smart ignition control is being attempted to be activated while key is out of detection range	ON/OFF
KEY LOW–BATT WRN (Warn when key battery becomes weak)	ON	Function that warns driver that key's battery power is low	ON/OFF
SMART UNLOCK (Smart door unlock mode)	EACH	Function that makes smart unlock operation available.	ALL/EACH/D–door
TRANSMIT INTVAL (Transmission interval)	300ms	Function that sets smart signal transmission intervals when vehicle is stopped and key is outside vehicle	150ms/300ms/450ms/ 600ms
PARK WAIT TIME (Wait time to permit opening door after locking)	3.0s	Function that sets waiting time to permit opening door after door is locked with smart lock function	0.5s/1.5s/2.5s/5s
SMART BACK DOOR (Backdoor opening operation when vehicle is locked)	LONG	Function that enables back door to open when key is inside luggage compartment	LONG/TWICE/OFF