

## PROBLEM SYMPTOMS TABLE

Proceed to the reference page shown in the table below for each malfunction symptom and troubleshoot each circuit.

Symptoms	Suspected Area	See Page
Smart functions do not operate at all	<ol style="list-style-type: none"> <li>5. Wireless door lock control system</li> <li>6. Smart cancel switch</li> <li>7. Smart ECU</li> <li>8. Wire harness</li> </ol>	<a href="#">05-2177</a>
Smart cancel switch does not operate	<ol style="list-style-type: none"> <li>1. Wireless door lock control system</li> <li>2. Smart cancel switch</li> <li>3. Smart ECU</li> <li>4. Wire harness</li> </ol>	<a href="#">05-2180</a>
Smart cancel switch does not operate	<ol style="list-style-type: none"> <li>1. Smart cancel switch</li> <li>2. Smart ECU</li> <li>3. Wire harness</li> </ol>	<a href="#">05-2180</a>
Smart unlock function does not operate on driver door	<ol style="list-style-type: none"> <li>1. Power door lock control system</li> <li>2. Door oscillator LH</li> <li>3. Front door outside handle assy</li> <li>4. Smart ECU</li> <li>5. Wire harness</li> </ol>	<a href="#">05-2189</a>
Smart unlock function does not operate on passenger door	<ol style="list-style-type: none"> <li>1. Power door lock control system</li> <li>2. Door oscillator RH</li> <li>3. Front door outside handle assy</li> <li>4. Smart ECU</li> <li>5. Wire harness</li> </ol>	<a href="#">05-2194</a>
Smart lock and unlock functions do not operate on driver door	<ol style="list-style-type: none"> <li>1. Power door lock control system</li> <li>2. Door oscillator LH</li> <li>3. Smart ECU</li> <li>4. Wire harness</li> </ol>	<a href="#">05-2183</a>
Smart lock and unlock functions do not operate on passenger door	<ol style="list-style-type: none"> <li>1. Power door lock control system</li> <li>2. Door oscillator RH</li> <li>3. Smart ECU</li> <li>4. Wire harness</li> </ol>	<a href="#">05-2186</a>
Smart lock function does not operate on driver door	<ol style="list-style-type: none"> <li>1. Power door lock control system</li> <li>2. Front door outside handle assy</li> <li>3. Smart ECU</li> <li>4. Wire harness</li> </ol>	<a href="#">05-2199</a>
Smart lock function does not operate on passenger door	<ol style="list-style-type: none"> <li>1. Power door lock control system</li> <li>2. Front door outside handle assy</li> <li>3. Smart ECU</li> <li>4. Wire harness</li> </ol>	<a href="#">05-2202</a>
Hybrid vehicle control system does not start using smart ignition function (starts when key is inserted)	<ol style="list-style-type: none"> <li>1. Room oscillator</li> <li>2. Smart ECU</li> <li>3. Smart key</li> <li>4. Wire harness</li> </ol>	<a href="#">05-2205</a>
Smart back door unlock function does not operate when key is outside back door	<ol style="list-style-type: none"> <li>1. Back door oscillator (outer)</li> <li>2. Back door opener switch</li> <li>3. Luggage antenna</li> <li>4. Smart ECU</li> <li>5. Wire harness</li> </ol>	<a href="#">05-2209</a>
Smart key luggage compartment lock-in prevention function does not operate	<ol style="list-style-type: none"> <li>1. Back door oscillator (inner)</li> <li>2. Smart ECU</li> <li>3. Wire harness</li> </ol>	<a href="#">05-2215</a>