


HYBRID VEHICLE CONTROL ECU

21044-01

REPLACEMENT

1. REMOVE REAR FLOOR BOARD NO.2 (See page 21-116)
2. REMOVE DECK FLOOR BOX REAR (See page 21-116)
3. REMOVE REAR FLOOR BOARD NO.3 (See page 21-116)
4. DISCONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL) (See page 21-116)
5. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.1 (See page 71-13)
6. REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSY LOWER (See page 71-13)
7. REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSY UPPER (See page 71-13)
8. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.3 (See page 71-13)
9. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.4 (See page 71-13)
10. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.2 (See page 71-13)
11. REMOVE MULTI-DISPLAY ASSY (See page 71-13)
12. REMOVE GLOVE COMPARTMENT DOOR STOPPER SUB-ASSY (See page 71-13)
13. REMOVE GLOVE COMPARTMENT DOOR ASSY (See page 71-13)
14. REMOVE GLOVE COMPARTMENT DOOR (See page 71-13)
15. REMOVE INSTR PANEL SPEAKER PANEL SUB-ASSY NO.1 W/CTR SPEAKER (See page 71-13)
16. REMOVE FRONT PILLAR GARNISH CORNER PIECE RH (See page 71-13)
17. REMOVE FRONT PILLAR GARNISH CORNER PIECE LH (See page 71-13)
18. REMOVE FRONT PILLAR GARNISH RH (See page 71-13)
19. REMOVE FRONT PILLAR GARNISH LH (See page 71-13)
20. DISCONNECT PASSENGER AIRBAG CONNECTOR (See page 71-13)
21. REMOVE INSTRUMENT PANEL SUB-ASSY W/PASSENGER AIRBAG ASSY (See page 71-13)
22. REMOVE HEATER TO REGISTER DUCT NO.3 (See page 71-13)
23. REMOVE ECM (See page 10-24)

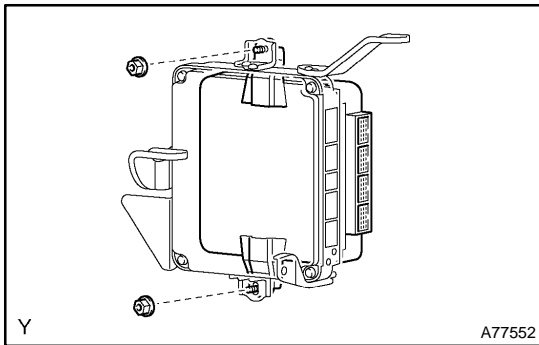

24. REMOVE HYBRID VEHICLE CONTROL ECU
 - (a) Remove the 2 nuts and hybrid vehicle control ECU.

25. INSTALL HYBRID VEHICLE CONTROL ECU
 - (a) Install the hybrid vehicle control ECU with the 2 nuts.
Torque: 5.5 N·m (56 kgf·cm, 49 in·lbf)
26. INSTALL ECM (See page 10-24)
27. INSTALL HEATER TO REGISTER DUCT NO.3
28. INSTALL INSTRUMENT PANEL SUB-ASSY W/PASSENGER AIRBAG ASSY
29. CONNECT PASSENGER AIRBAG CONNECTOR
30. INSTALL FRONT PILLAR GARNISH RH
31. INSTALL FRONT PILLAR GARNISH LH

32. INSTALL FRONT PILLAR GARNISH CORNER PIECE RH
33. INSTALL FRONT PILLAR GARNISH CORNER PIECE LH
34. INSTALL INSTR PANEL SPEAKER PANEL SUB-ASSY NO.1 W/CTR SPEAKER
35. INSTALL GLOVE COMPARTMENT DOOR
36. INSTALL GLOVE COMPARTMENT DOOR ASSY
37. INSTALL GLOVE COMPARTMENT DOOR STOPPER SUB-ASSY
38. INSTALL MULTI-DISPLAY ASSY
39. INSTALL INSTRUMENT PANEL REGISTER ASSY NO.2
40. INSTALL INSTRUMENT PANEL REGISTER ASSY NO.4
41. INSTALL INSTRUMENT PANEL REGISTER ASSY NO.3
42. INSTALL INSTRUMENT PANEL FINISH PANEL SUB-ASSY UPPER
43. INSTALL INSTRUMENT PANEL FINISH PANEL SUB-ASSY LOWER
44. INSTALL INSTRUMENT PANEL REGISTER ASSY NO.1
45. CONNECT BATTERY NEGATIVE TERMINAL
Torque: 6.0 N·m (61 kgf·cm, 53 in·lbf)
46. INSPECT SRS WARNING LIGHT
47. INSTALL REAR FLOOR BOARD NO.3
48. INSTALL DECK FLOOR BOX REAR
49. INSTALL REAR FLOOR BOARD NO.2
50. REGISTER ECU COMMUNICATION ID (W/O SMART KEY) (See page 05-2382)
51. REGISTER ECU COMMUNICATION ID (W/ SMART KEY) (See page 05-2333)
52. POWER WINDOW CONTROL SYSTEM INITIALIZE (See page 01-28)