


REPLACEMENT


NOTICE:

- When working on the high voltage systems, always wear insulating gloves.
 - After removing the service plug grip, do not operate the power switch as it may damage the hybrid vehicle control ECU.
 - Keep the removed service plug in your pocket to prevent other technicians from reconnecting it while you are servicing the vehicle.
 - After removing the service plug grip, do not touch the high voltage connectors and terminals for 5 minutes.
1. PRECAUTION (See page 21-7)
 2. REMOVE FRONT WHEELS
 3. REMOVE REAR FLOOR BOARD NO.2 (See page 21-116)
 4. REMOVE DECK FLOOR BOX REAR (See page 21-116)
 5. REMOVE REAR FLOOR BOARD NO.3 (See page 21-116)
 6. DISCONNECT BATTERY NEGATIVE TERMINAL (See page 21-116)
 7. REMOVE SERVICE PLUG GRIP (See page 21-116)
 8. REMOVE DECK TRIM COVER REAR (See page 21-54)
 9. REMOVE TONNEAU COVER ASSY (See page 21-54)
 10. REMOVE REAR SEAT CUSHION ASSY (See page 21-54)
 11. REMOVE REAR FLOOR BOARD NO.1 (See page 21-54)
 12. REMOVE REAR SIDE SEAT BACK FRAME LH (See page 21-54)
 13. REMOVE REAR FLOOR BOARD NO.4 (See page 21-54)
 14. REMOVE DECK FLOOR BOX LH (See page 21-54)
 15. REMOVE DECK TRIM SIDE PANEL ASSY LH (See page 21-54)
 16. REMOVE BATTERY CARRIER BRACKET (See page 21-54)

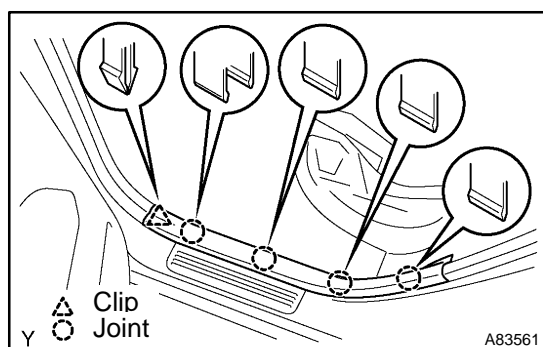


17. REMOVE REAR DOOR SCUFF PLATE LH

- (a) Remove the clip and 4 joints shown in the illustration, then remove the rear door scuff plate.

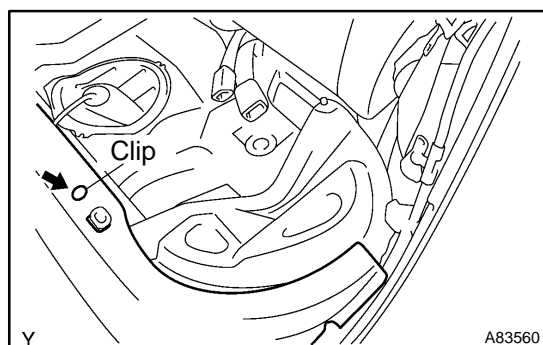

18. REMOVE FLOOR SIDE PANEL LH

- (a) Remove the clip, then roll back the carpet.

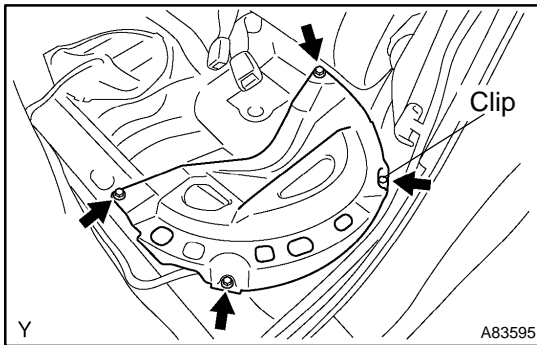

- (b) Remove the clip from the floor side panel.
- (c) Remove the 3 bolts and floor side panel.

19. REMOVE BATTERY CARRIER PANEL NO.6 (See page 21-54)


NOTICE:

Wear insulating gloves.

20. REMOVE JUNCTION TERMINAL (See page 21-54)

NOTICE:

Wear insulating gloves.

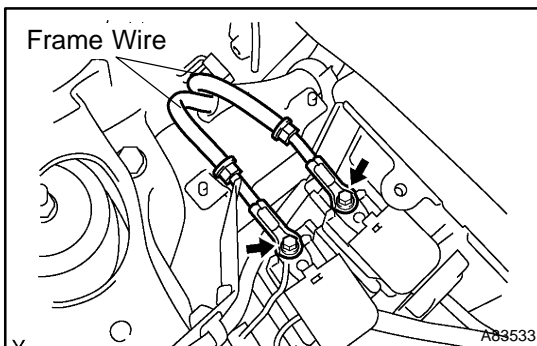

21. REMOVE FRAME WIRE (RR POSITION)


NOTICE:

Wear insulating gloves.


- (a) Remove the 2 nuts, then remove the frame wire from the system main relay No. 2 and No. 3.

NOTICE:

Insulate the removed terminals with insulating tape.

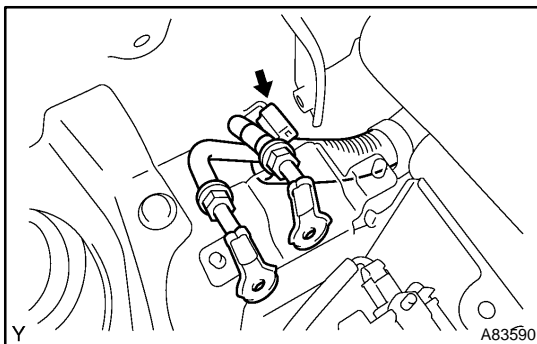


- (b) Remove the clamps, then remove the frame wire from the rear floor.

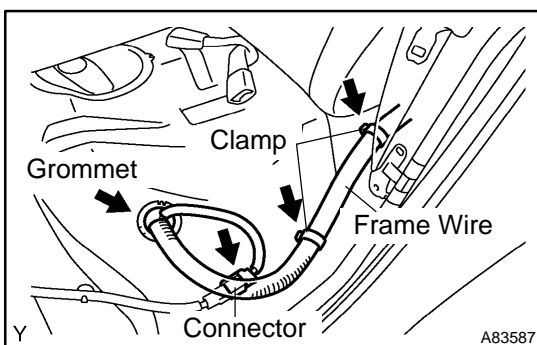

- (c) Remove the 2 clamps, then disconnect the frame wire from the center floor panel.
- (d) Disconnect the connector.
- (e) Disconnect the grommet.

22. REMOVE FRONT WIPER ARM HEAD CAP (See page 66-14)
23. REMOVE FR WIPER ARM LH (See page 66-14)
24. REMOVE FR WIPER ARM RH (See page 66-14)
25. REMOVE HOOD TO COWL TOP SEAL (See page 66-14)
26. REMOVE COWL TOP VENTILATOR LOUVER LH (See page 66-14)
27. REMOVE COWL TOP VENTILATOR LOUVER RH (See page 66-14)
28. REMOVE WINDSHIELD WIPER LINK ASSY (See page 66-14)
29. REMOVE COWL TOP PANEL SUB-ASSY OUTER FRONT (See page 11-15)

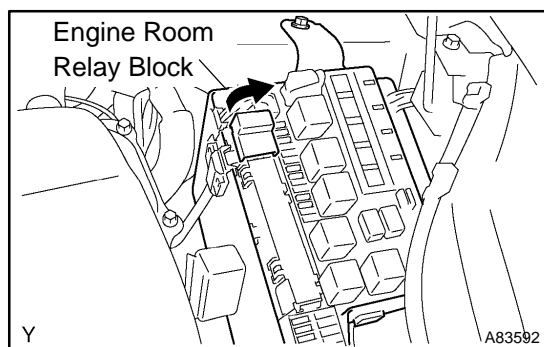


30. SEPARATE FRAME WIRE (FR POSITION)


NOTICE:

Wear insulating gloves.

- (a) Flip open the cover of the jump start terminal on the engine room relay block.

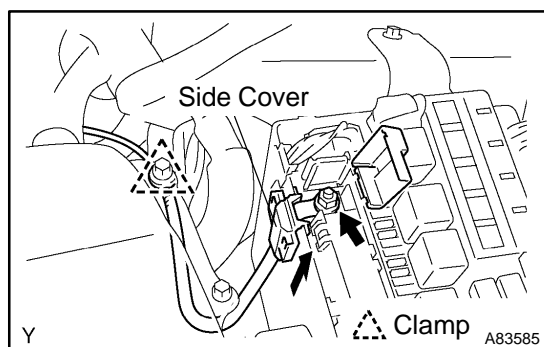


- (b) Remove the side cover by sliding it upward.
- (c) Remove the nut, then disconnect the frame wire from the engine room relay block.
- (d) Disconnect the clamp, then disconnect the frame wire from the side member.

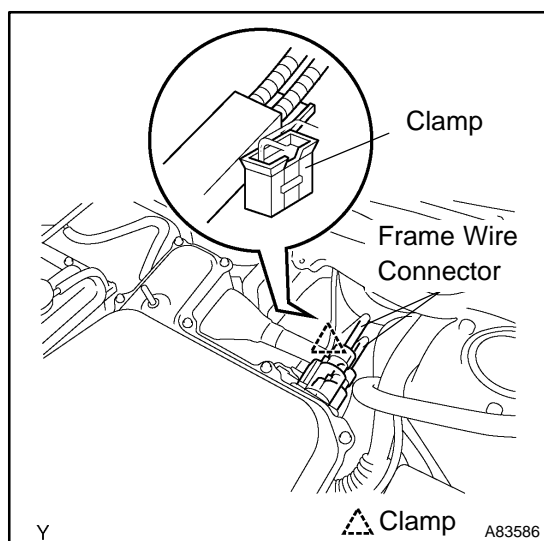


- (e) Remove the 2 frame wire connectors shown in the illustration from the with converter inverter assembly.
- (f) Disconnect the clamp, then disconnect the frame wire from the dash panel bracket.


31. REMOVE COLUMN HOLE COVER SILENCER SHEET (See page 14-32)
32. SEPARATE STEERING INTERMEDIATE SHAFT (See page 14-32)
33. REMOVE ENGINE UNDER COVER RH
34. REMOVE ENGINE UNDER COVER LH

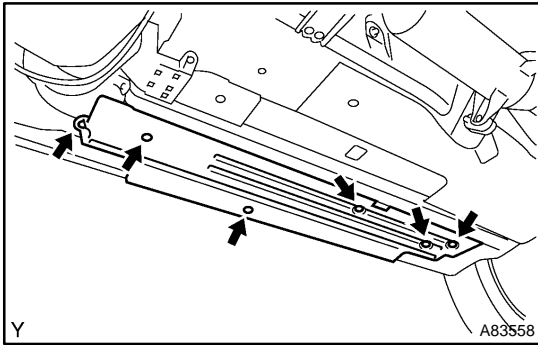


- 35. REMOVE FRONT FLOOR COVER LH**
 (a) Remove the 6 clips and front floor cover LH.

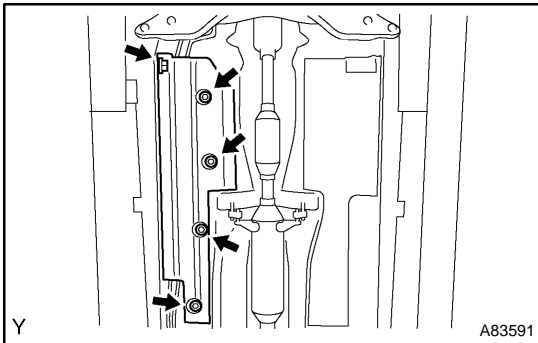


- 36. REMOVE FRONT FLOOR COVER CENTER LH**
 (a) Remove the 5 clips and front floor cover center LH.

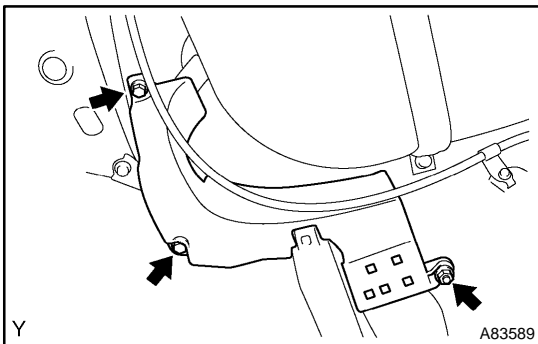


- 37. REMOVE WIRING HARNESS PROTECTOR NO.1**
NOTICE:
Wear insulating gloves.
 (a) Remove the 2 nuts, bolt and wiring harness protector No. 1.

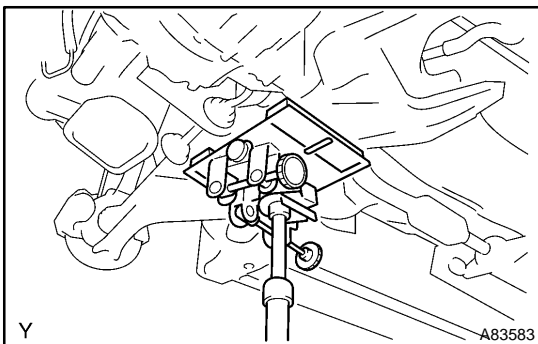

- 38. SEPARATE FRONT SUSPENSION CROSSMEMBER SUB-ASSY**
 (a) Support the front suspension cross member using a jack.

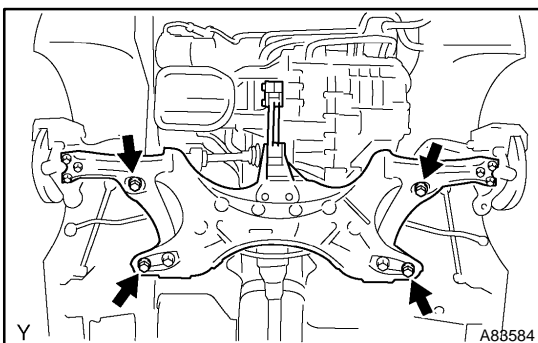

- (b) Remove the 4 bolts shown in the illustration from the front suspension crossmember.

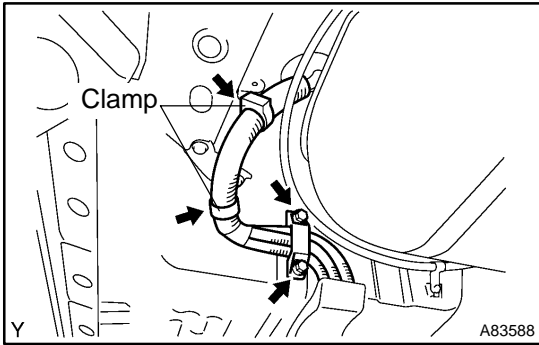

39. REMOVE FRAME WIRE


NOTICE:

Wear insulating gloves.

- (a) Remove the 2 bolts shown in the illustration.
- (b) Disconnect the 2 clamps.
- (c) Lower the jack a little and remove both nuts A.

NOTICE:

- Lower the jack slowly to avoid interfering with objects loaded on the front suspension crossmember.
- Do not remove the jack.
- (d) Remove both nuts B.
- (e) Disconnect the fit in clamp, then remove the frame wire.

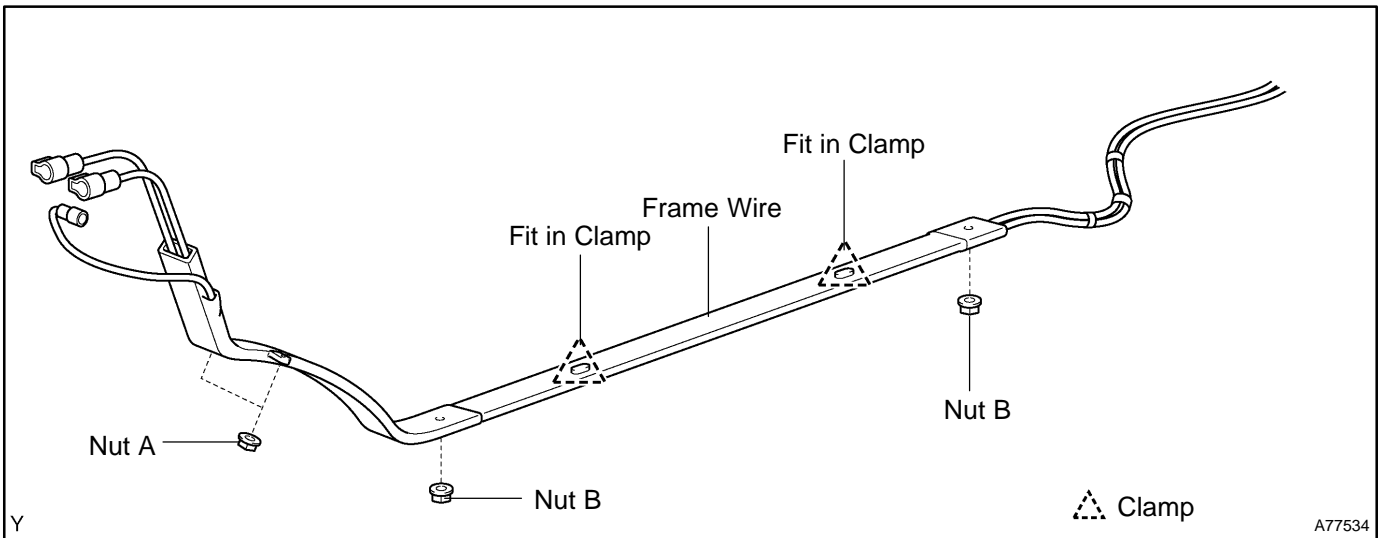

40. INSTALL FRAME WIRE

NOTICE:



Wear insulating gloves.

- (a) Temporarily fasten the frame wire to the vehicle.
- (b) Connect the fit in clamp to the stud in the floor panel, then install the frame wire with both nuts A.

Torque: 9.0 N·m (92 kgf·cm, 80 in·lbf)

- (c) Install both nuts B shown in the illustration.

Torque: 9.0 N·m (92 kgf·cm, 80 in·lbf)

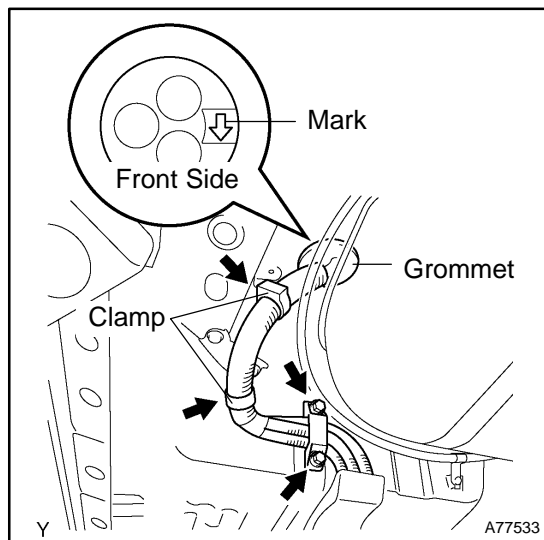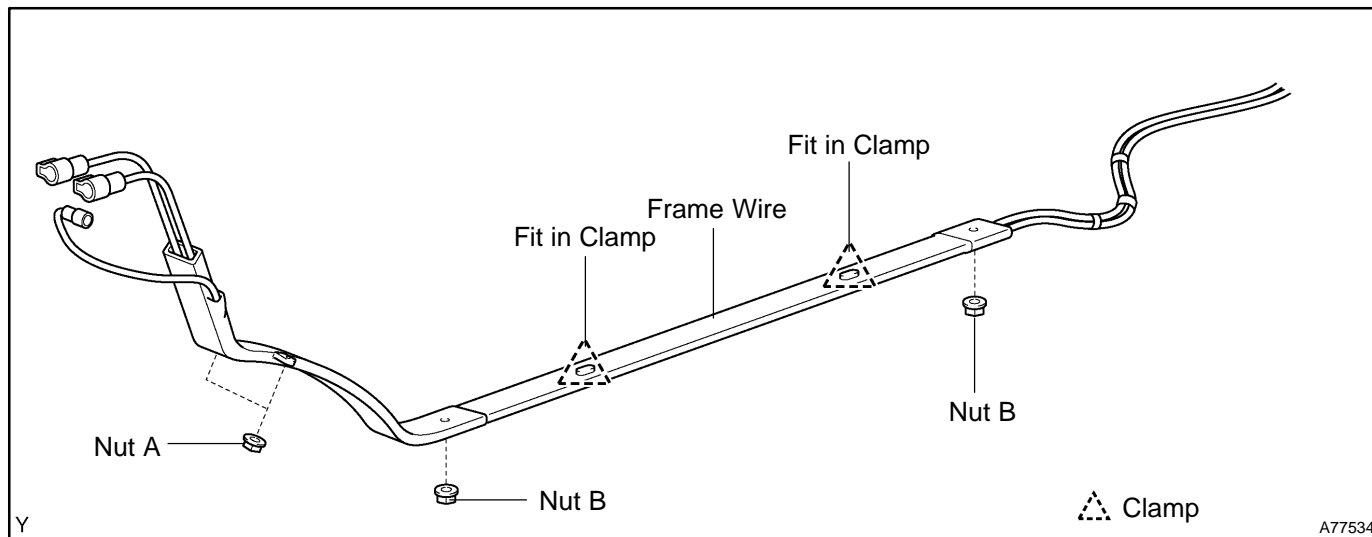


- (d) As shown in the illustration, point the arrow on the grommet in the front direction, then install the grommet.

- (e) Install the 2 bolts.

Torque: 9.0 N·m (92 kgf·cm, 80 in·lbf)

- (f) Install the 2 clamps.

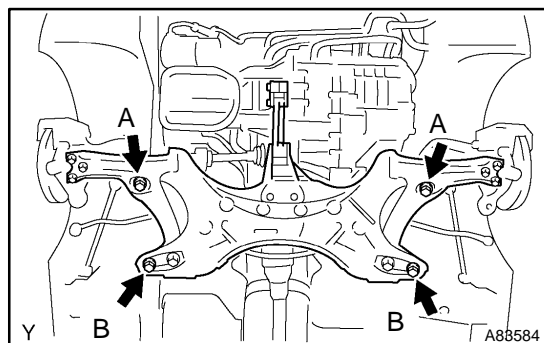

41. INSTALL FRONT SUSPENSION CROSSMEMBER SUB-ASSY


- (a) Install the front suspension crossmember with the 4 bolts.

Torque:


113 N·m (1,152 kgf·cm, 83 ft·lbf) for bolt A

157 N·m (1,601 kgf·cm, 116 ft·lbf) for bolt B


- (b) Remove the jack.

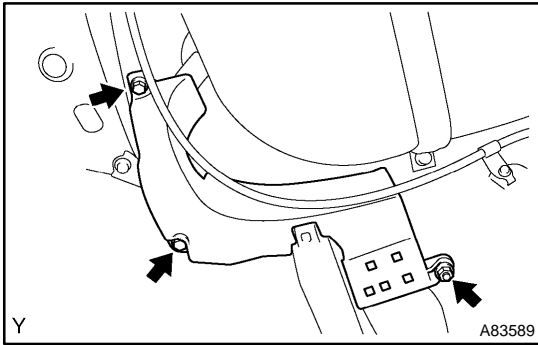**42. INSTALL WIRING HARNESS PROTECTOR NO.1****NOTICE:****Wear insulating gloves.**

- (a) Install the wiring harness protector No. 1 with the 2 bolts and nut.

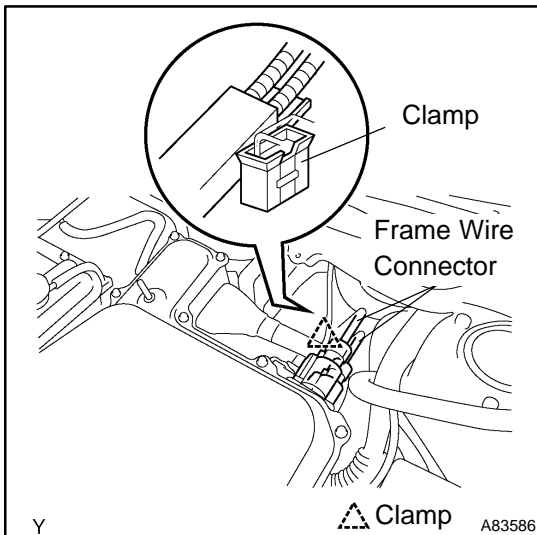Torque: 9.0 N·m (92 kgf·cm, 80 in·lbf)**43. INSTALL FRONT FLOOR COVER CENTER LH****44. INSTALL FRONT FLOOR COVER LH****45. INSTALL ENGINE UNDER COVER RH****46. INSTALL ENGINE UNDER COVER LH****47. INSTALL STEERING INTERMEDIATE SHAFT (See page 14-32)****48. INSTALL COLUMN HOLE COVER SILENCER SHEET (See page 14-32)****49. INSTALL FRAME WIRE (FR POSITION)****NOTICE:****Wear insulating gloves.**

- (a) Connect the 2 connectors shown in the illustration to the with converter inverter assembly.
- (b) Connect the clamp to the engine room relay block with the nut.

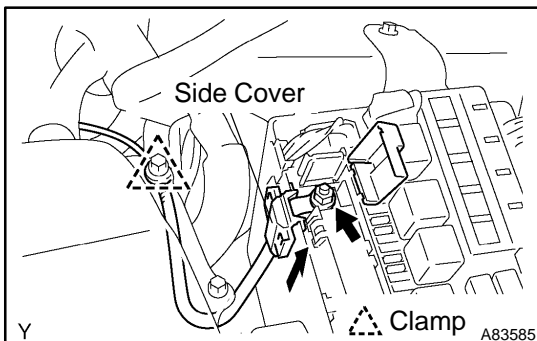


- (c) Install the frame wire to the engine room relay block with the nut.

Torque: 9.0 N·m (92 kgf·cm, 80 in·lbf)

- (d) Install the side cover to the engine room relay block.
- (e) Install the frame wire clamp to the side member.

50. INSTALL COWL TOP PANEL SUB-ASSY OUTER FRONT**51. INSTALL WINDSHIELD WIPER LINK ASSY (See page 66-14)****52. INSTALL COWL TOP VENTILATOR LOUVER RH****53. INSTALL COWL TOP VENTILATOR LOUVER LH**

- 54. INSTALL HOOD TO COWL TOP SEAL
- 55. INSTALL FR WIPER ARM LH (See page 66-14)
- 56. INSTALL FR WIPER ARM RH (See page 66-14)
- 57. INSTALL FRONT WIPER ARM HEAD CAP

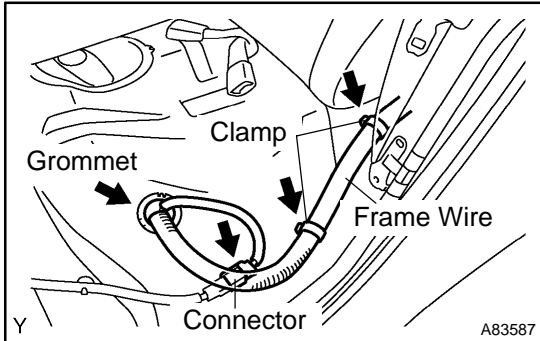


58. INSTALL FRAME WIRE (RR POSITION)


NOTICE:

Wear insulating gloves.

- (a) Connect the connector.
- (b) Install the 2 clamps, then connect the frame wire to the center floor panel.

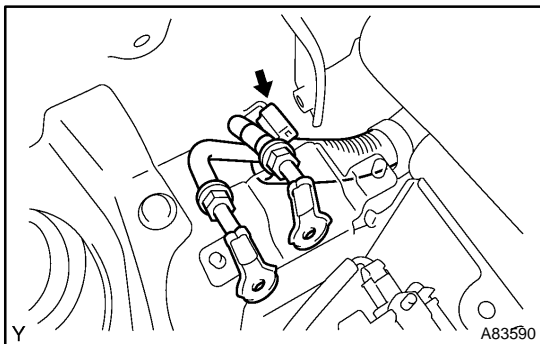

- (c) Install the frame wire to the rear floor panel with the clamp.

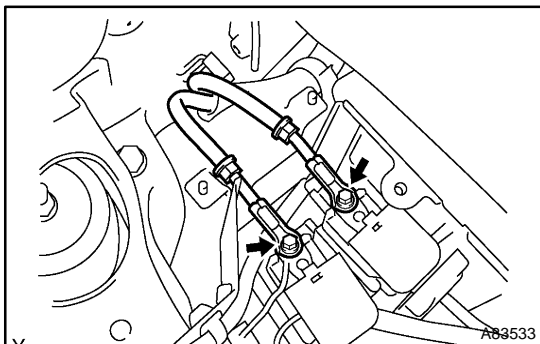

- (d) Install the frame wire to the system main relay No. 2 and No. 3 with 2 new nuts.


Torque: 5.6 N·m (57 kgf·cm, 50 in·lbf)

59. INSTALL JUNCTION TERMINAL (See page 21-54)

NOTICE:


Wear insulating gloves.

60. INSTALL BATTERY CARRIER PANEL NO.6 (See page 21-54)

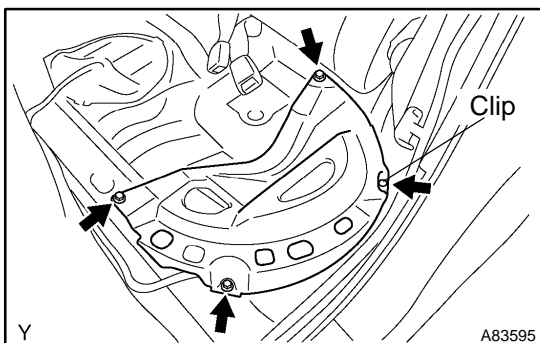

61. INSTALL FLOOR SIDE PANEL LH

- (a) Install the clip.
- (b) Install the floor side panel with the 3 bolts.

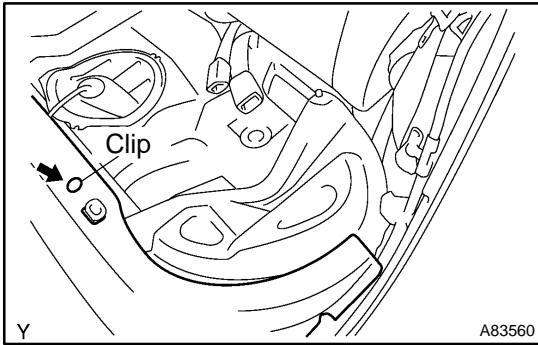

(c) Install the carpet with the clip.

62. INSTALL REAR DOOR SCUFF PLATE LH
63. INSTALL BATTERY CARRIER BRACKET (See page 21-54)
64. INSTALL DECK TRIM SIDE PANEL ASSY LH
65. INSTALL DECK FLOOR BOX LH
66. INSTALL REAR FLOOR BOARD NO.4
67. INSTALL REAR SIDE SEAT BACK FRAME LH
68. INSTALL REAR FLOOR BOARD NO.1
69. INSTALL REAR SEAT CUSHION ASSY
70. INSTALL TONNEAU COVER ASSY
71. INSTALL DECK TRIM COVER REAR
72. INSTALL SERVICE PLUG GRIP (See page 21-116)

NOTICE:

Wear insulating gloves.

73. CONNECT BATTERY NEGATIVE TERMINAL
Torque: 6.0 N·m (61 kgf·cm, 53 in·lbf)
74. INSTALL REAR FLOOR BOARD NO.3
75. INSTALL DECK FLOOR BOX REAR
76. INSTALL REAR FLOOR BOARD NO.2
77. INSTALL FRONT WHEELS
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
78. POWER WINDOW CONTROL SYSTEM INITIALIZE (See page 01-28)