


REPLACEMENT

HINT:

Installation is in the reverse order of removal.

1. **PRECAUTION (SEE PAGE 60-1)**
2. **DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)**
3. **REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER (SEE PAGE 71-13)**
4. **REMOVE AIR DUCT REAR NO.3 (SEE PAGE 55-17)**

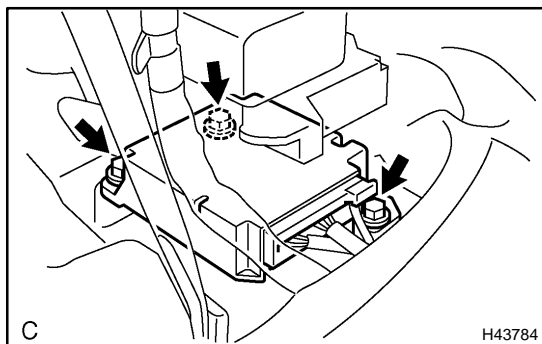

5. REMOVE AIR BAG ECU ASSY

- (a) Disconnect the holder (with connectors) from the airbag ECU assy.
- (b) Remove the 3 bolts and the airbag ECU assy.

6. INSTALL AIR BAG ECU ASSY

- (a) Check that the power switch is off.
- (b) Check that the battery negative (–) terminal is disconnected.

NOTICE:

After removing the terminal, wait for at least 90 seconds before starting the operation.

- (c) Install the airbag ECU assy with the 3 bolts.

Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)

NOTICE:

- If the airbag ECU assy has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
 - When installing the airbag ECU assy, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.
- (d) Check that there is no looseness in the installation parts of the airbag ECU assy.
 - (e) Connect the holder (with connectors) to the airbag ECU assy.
 - (f) Check that the water-proof sheet is properly set.

7. CONNECT BATTERY NEGATIVE TERMINAL

NOTICE:

When disconnecting the negative (–) battery terminal, initialize the following systems after the terminal is reconnected.

System Name	See Page
Power Window Control System	01-28

8. INSPECT SRS WARNING LIGHT (SEE PAGE 05-1397)