


REPLACEMENT

HINT:

- Use the same procedures for the RH side and LH side.
 - The procedures listed below are for the LH side.
 - Installation is in the reverse order of removal.
1. **PRECAUTION (SEE PAGE 60-1)**
 2. **DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)**
 3. **REMOVE REAR SEAT CUSHION ASSY (SEE PAGE 72-9)**
 4. **REMOVE REAR SIDE SEAT BACK FRAME (SEE PAGE 61-17)**

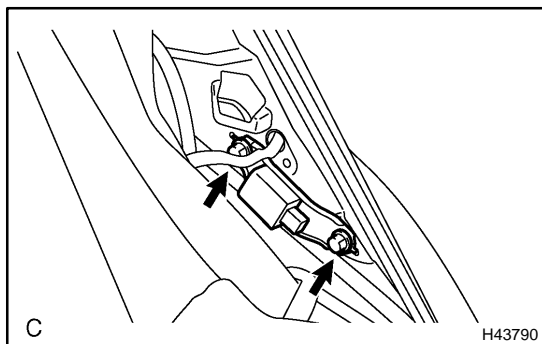

5. **REMOVE AIRBAG SENSOR REAR**
 - (a) Disconnect the connector from the airbag sensor rear.
 - (b) Remove the 2 bolts and the airbag sensor rear.

6. **INSTALL AIRBAG SENSOR REAR**

- (a) Check that the power switch is off.
- (b) Check that the battery negative (–) terminal is disconnected.

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

- (c) Install the airbag sensor rear with the 2 bolts.

Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)

NOTICE:

- If the airbag sensor rear has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
 - When installing the airbag sensor rear, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.
- (d) Check that there is no looseness in the installation parts of the airbag sensor rear.
 - (e) Connect the connector to the airbag sensor rear.

7. **CONNECT BATTERY NEGATIVE TERMINAL**

NOTICE:

When disconnecting the negative (–) battery terminal, initialize the following systems after the terminal is reconnected.

System Name	See Page
Power Window Control System	01-28

8. **INSPECT SRS WARNING LIGHT (SEE PAGE 05-1397)**