


ADJUSTMENT

1. ADJUST FOG LIGHT AIM

- (a) Prepare the vehicle by performing the following.
- Ensure there is no damage or deformation to the body around the headlamps.
 - Fill the fuel tank.
 - Make sure that the oil is filled to the specified level.
 - Make sure that the coolant is filled to the specified level.
 - Inflate the tires to the appropriate pressure (see page 28-1).
 - Place the spare tire, tools, and jack in their original position.
 - Unload the trunk.
 - Sit a person of average weight (68 kg, 150 lbs) in the driver's seat.
- (b) Start the engine and let it idle.

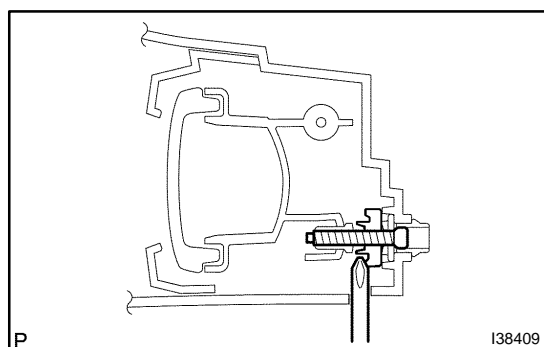

- (c) From underneath the vehicle, turn the screw to perform the adjustment.

HINT:

- The lamp moves up when turning the screw clockwise, and moves down when turning the screw counterclockwise.
- When adjusting the fog lamp, insert a screwdriver into the front fender liner fog lamp service hole.