

## PRECAUTION

### 1. PRECAUTION FOR VEHICLE WITH SRS AIRBAG AND SEAT BELT PRETENSIONER

- (a) Some operations in this section may affect the SRS airbags. Prior to performing the corresponding operations, read the SRS airbag NOTICE (see page [60-1](#)).

#### NOTICE FOR INITIALIZATION:

**When disconnecting the negative (–) battery terminal, initialize the following systems after the terminal is reconnected.**

System Name	See Page
Power Window Control System	<a href="#">01-28</a>

#### NOTICES FOR HYBRID SYSTEM ACTIVATION:

- **When the warning lamp is illuminated or the battery has been disconnected and reconnected, pressing the power switch may not start the system on the first try. If so, press the power switch again.**
- **With the power switch's power mode changed to ON (IG), disconnect the battery. If the key is not in the key slot during reconnection, DTC B2799 may be output.**