

## PROBLEM SYMPTOMS TABLE

Symptom	Suspected Area	See Page
Horn does not sound.	1. HORN fuse 2. HORN relay 3. High pitched horn 4. Low pitched horn 5. Horn button switch 6. Wire harness	<a href="#">77-4</a> <a href="#">77-4</a> <a href="#">77-4</a> <a href="#">77-4</a> - -