

ELECTRICAL KEY HOLDER ASSY

REPLACEMENT

8005H-01

HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- A bolt without a torque specification is shown in the standard bolt chart (see page [03-2](#)).

- 1. DISCONNECT BATTERY NEGATIVE TERMINAL**
- 2. REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSY LOWER (See page [71-13](#))**
- 3. REMOVE ELECTRICAL KEY HOLDER ASSY**

- (a) Disconnect the connector.
- (b) Remove the 2 screws and electrical key holder.

- 4. CONNECT BATTERY NEGATIVE TERMINAL**

NOTICE:

When disconnecting the negative (-) battery terminal, initialize the following systems after the terminal is reconnected.

- 5. SYSTEM INITIALIZE**

System Name	See Page
Power Window Control System	01-28