

FOREWORD

This wiring diagram manual has been prepared to provide information on the electrical system of the 2004 PRIUS.

Applicable models: NHW20 Series

For service specifications and repair procedures of the above models other than those listed in this manual, refer to the following manuals;

Manual Name	Pub. No.
● 2004 PRIUS Repair Manual	
Volume 1	RM1075U1
Volume 2	RM1075U2
Volume 3	RM1075U3
● 2004 PRIUS New Car Features	NCF255U

All information in this manual is based on the latest product information at the time of publication. However, specifications and procedures are subject to change without notice.

TOYOTA MOTOR CORPORATION

CAUTION

When repairing the hybrid vehicle (HV), always follow the direction given in the repair manual listed above to prevent electrical shock, leakage or explosion.

NOTICE

When handling supplemental restraint system components (removal, installation or inspection, etc.), always follow the direction given in the repair manuals listed above to prevent accidents and supplemental restraint system malfunction.