


Stop Light

From Power Source System (See Page 66)

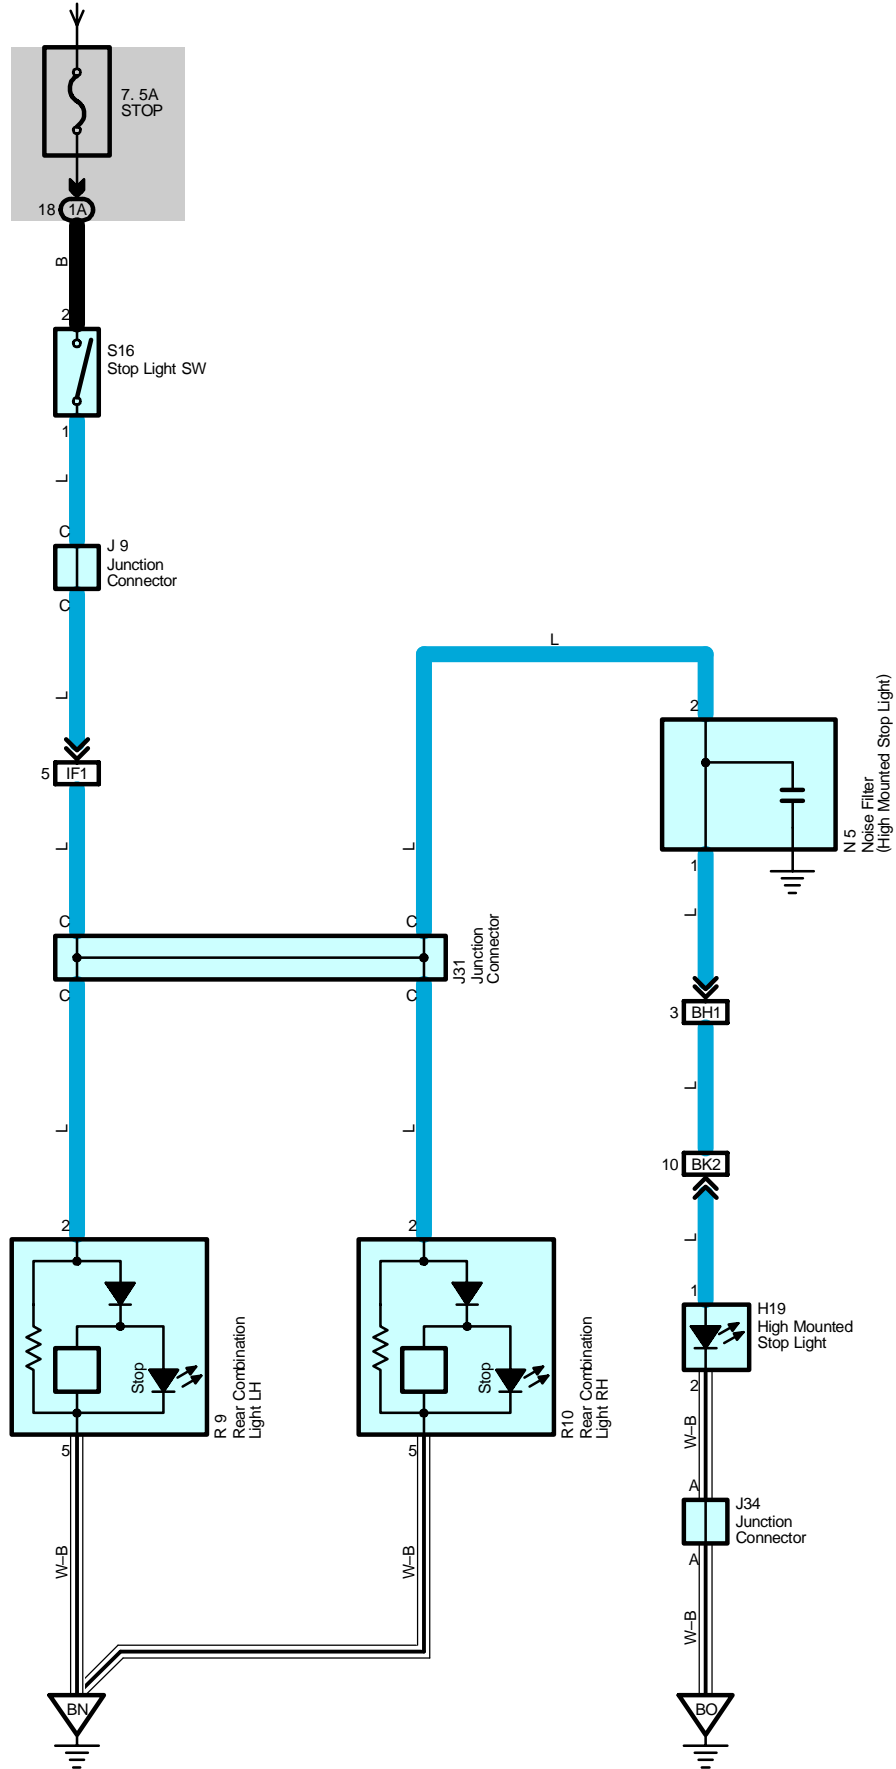

Service Hints**S16 Stop Light SW**

2-1 : Closed with the brake pedal depressed

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
H19	51	J34	51	R10	52
J9	48	N5	52	S16	49
J31	51	R9	52		

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	56	Floor Wire and Engine Room Main Wire (Left Kick Panel)
BH1	62	Back Door No.1 Wire and Floor Wire (Rear Side of Roof Panel)
BK2	62	Back Door No.1 Wire and Back Door No.2 Wire (Rear Side of Roof Panel)

 : **Ground Points**

Code	See Page	Ground Points Location
BN	60	Lower Back Panel Center
BO	60	Center of the Back Door Panel