DRIVE SHAFT / PROPELLER SHAFT PREPARATION

023FU-01

SST

	09240-00020	Wire Gauge Set	FRONT DRIVE SHAFT
	09520-01010	Drive Shaft Remover Attachment	FRONT DRIVE SHAFT
	09520–24010	Differential Side Gear Shaft	FRONT DRIVE SHAFT
		Puller	
	(09520–32040)	Shocker Set	FRONT DRIVE SHAFT
	09521–24010	Rear Axle Shaft Puller	FRONT DRIVE SHAFT
	09527–10011	Rear Axle Shaft Bearing Remover	FRONT DRIVE SHAFT
0000	09608–16042	Front Hub Bearing Adjusting Tool	FRONT DRIVE SHAFT
	(09608–02021)	Bolt & Nut	FRONT DRIVE SHAFT
0	(09608–02041)	Retainer	FRONT DRIVE SHAFT
	09608–32010	Steering Knuckle Oil Seal Replacer	FRONT AXLE HUB SUB-ASSY LH
	09611–36020	Tie Rod End Puller	FRONT AXLE HUB SUB-ASSY LH
	09628-00011	Ball Joint Puller	FRONT DRIVE SHAFT FRONT AXLE HUB SUB-ASSY LH

2004 Prius - Preliminary Release (RM1075U)

Author: Date: 85

-			
	09628–10011	Ball Joint Puller	REAR AXLE LH HUB BOLT FRONT AXLE LH HUB BOLT
	09628–62011	Boll Joint Puller	FRONT AXLE HUB SUB-ASSY LH
	09930-00010	Drive Shaft Nut Chisel	FRONT DRIVE SHAFT FRONT AXLE HUB SUB-ASSY LH
	09950-00020	Bearing Remover	FRONT DRIVE SHAFT
0000	09950–60020	Replacer Set No.2	FRONT AXLE HUB SUB-ASSY LH
6	(09951–00720)	Replacer 72	FRONT AXLE HUB SUB-ASSY LH
	09950–70010	Handle Set	FRONT AXLE HUB SUB-ASSY LH
	(09951–07150)	Handle 150	FRONT AXLE HUB SUB-ASSY LH

Recomended Tools

09011–12301	Socket Wrench 30 mm	FRONT DRIVE SHAFT FRONT AXLE HUB SUB-ASSY LH
09905-00012	Snap Ring No.1 Expander	FRONT DRIVE SHAFT

Equipment

Torque wrench	
Dial indicator with magnetic base	
Alingment tester	
Toe-in gauge	
Angle gauge	

Lubricant

Item	Capacity
Front drive shaft	
Outboard joint grease	125 to 135 g (4.9 to 5.3 oz.)
Inboard joint grease	125 to 135 g (4.9 to 5.3 oz.)

2004 Prius - Preliminary Release (RM1075U)

Author: Date: 86