

## PROBLEM SYMPTOMS TABLE

### HINT:

Proceed with troubleshooting of each circuit in the table below.

Symptom	Suspect Area	See page
<ul style="list-style-type: none"> <li>• When the power switch is on (IG), the SRS warning light sometimes comes on after approximately 6 seconds.</li> <li>• The SRS warning light remains on when DTC is not output.</li> </ul>	<ul style="list-style-type: none"> <li>• SRS Warning Light Circuit Malfunction (Remains on when DTC is not output)</li> </ul>	05-1649
<ul style="list-style-type: none"> <li>• The SRS warning light does not come on with the power switch on (IG).</li> </ul>	<ul style="list-style-type: none"> <li>• SRS Warning Light Circuit Malfunction (Does not come on when the power switch is turned on (IG)).</li> </ul>	05-1654
<ul style="list-style-type: none"> <li>• SRS warning light is blink.</li> <li>• DTC cannot read.</li> </ul>	<ul style="list-style-type: none"> <li>• TC Terminal Circuit</li> </ul>	05-1656