


CD SOUND SKIPS

HINT:

- The sound may skip when driving on an unpaved road.
- Sudden temperature changes in the cabin will cause condensation inside the CD player and prevent it from playing.

INSPECTION PROCEDURE

1 DISC CLEANING

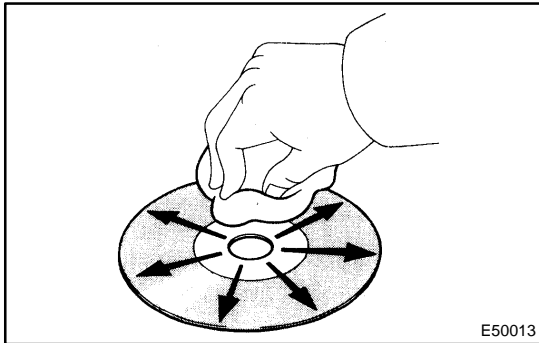

- (a) Disc cleaning
- (1) If the disc gets dirty, clean the disc by wiping the surface from the center to outside in a radial direction with a soft cloth.

NOTICE:

Do not use a conventional record cleaner or anti-static preservative.

OK: Malfunction disappears.

OK

DISC IS DIRTY

NG

2 REPLACE CD WITH ANOTHER AND RECHECK

- (a) Replace the CD with another and recheck.
- (1) Replace the CD with another normal one to see if the same trouble occurs again.

OK: Malfunction disappears.

OK

CD IS FAULTY

NG

3 CHECK OF RADIO RECEIVER ASSEMBLY INSTALLATION

- (a) Check the radio receiver assembly installation condition.
- (1) Check that the radio receiver assembly is installed properly.

OK: Installed properly.

NG

INSTALL THE RADIO RECEIVER ASSEMBLY PROPERLY

OK

CONDENSATION DUE TO TEMPERATURE CHANGE (LEAVE IT AS IT IS FOR A WHILE BEFORE USING)