
052BL-07

HOW TO PROCEED WITH TROUBLESHOOTING

The intelligent tester II can be used at step 3, 6, 7, 8, 9, 14.

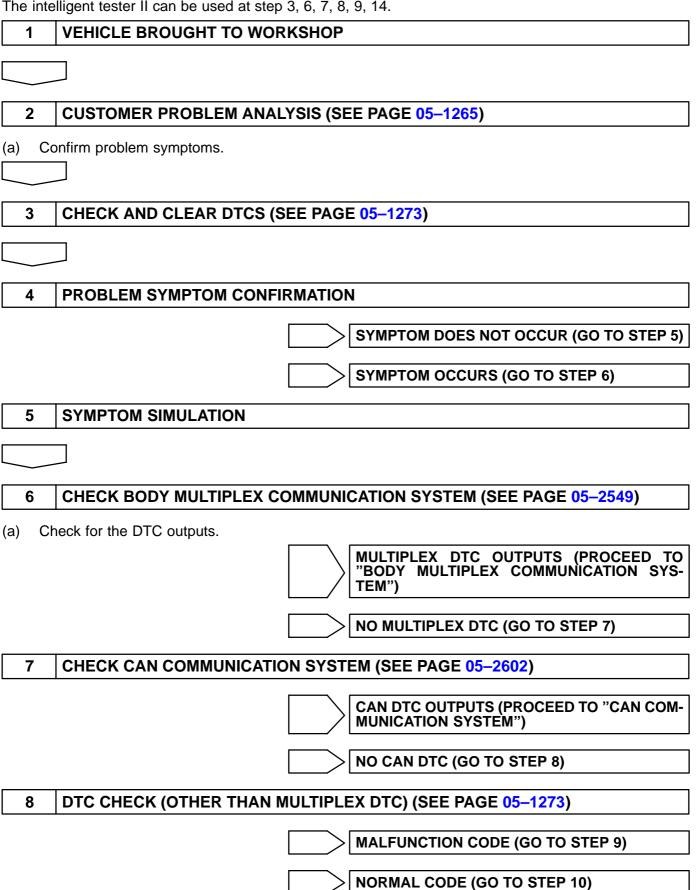

DIAGNOSTICS -	AIR CONDITIONING SYSTEM
---------------	-------------------------

9	DTC CHART (SEE PAGE 05–1280)
	GO TO STEP 10
10	PROBLEM SYMPTOMS TABLE (SEE PAGE 05-1268)
11	TERMINALS OF ECU (SEE PAGE 05–1270)
12	CIRCUIT INSPECTION (SEE PAGE 05–1282 – 05–1379)
13	IDENTIFICATION OF PROBLEM
14	REPAIR OR REPLACE
15	CONFIRMATION TEST
END	