

CHECK FOR INTERMITTENT PROBLEMS

HINT:

Inspect the vehicle's ECM using check mode. Intermittent problems are easier to detect when the ECM is in test mode with a hand-held tester. In check mode, the ECM uses 1 trip detection logic, which has a higher sensitivity to malfunctions than normal mode (default) using 2 trip detection logic.

- (a) Clear the DTCs (see page [05-41](#)).
- (b) Switch the hand-held tester from normal mode to check mode (see page [05-45](#)).
- (c) Perform a simulation test (see page [01-37](#)).
- (d) Check the connector(s) and terminal(s) (see page [01-37](#)).
- (e) Wiggle the harness(s) and connector(s) (see page [01-37](#)).