
05IF1-01

## **DIAGNOSIS SYSTEM**

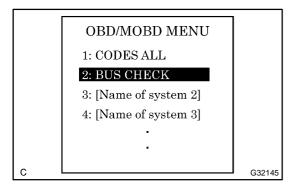

## 1. BUS CHECK

HINT:


The ECUs and sensors that are properly connected to the CAN communication system can be displayed using the hand–held tester via CAN VIM.

(a) Select "BUS CHECK" from the "OBD/MOBD MENU" screen.

This function is used to detect all ECUs and Sensors which are connected to the Communication Bus.

Press [ENTER]

(b) Press "ENTER" on the hand-held tester via CAN VIM.

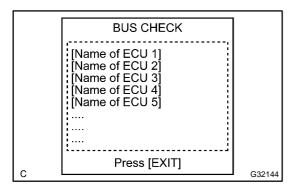

(c) The screen displays the ECUs and sensors that are properly connected to the CAN communication system.

HINT:

There is a communication stop in the system of any properly connected ECUs or sensors that are not displayed (see page 05–2605).

2004 Prius - Preliminary Release (RM1075U)

Author: Date: 2780

## 2. CHECK FOR INSTALLED SYSTEMS (ECUS & SENSORS) THAT ADOPT CAN COMMUNICATION

(a) The systems (ECUs, sensors) that adopt CAN communication vary depending on the vehicle's optional settings. Check which systems (ECUs, sensors) are installed on the vehicle.

ECU/Sensor name	Check method
Hybrid Vehicle Control ECU	Installed on all vehicles
Battery ECU	Installed on all vehicles
ECM	Installed on all vehicles
Skid Control ECU	Installed on all vehicles
Power Steering ECU	Installed on all vehicles
Gateway ECU	Installed on all vehicles
Steering Sensor *1	Vehicle with enhanced VSC (VSC warning lamp is installed in the combination meter)
Yaw Rate Sensor *1	Vehicle with enhanced VSC (VSC warning lamp is installed in the combination meter)

## HINT:

Author: Date: 2781

<sup>\*1:</sup> If enhanced VSC is not installed, neither the yaw rate sensor nor the steering sensor is adopted.