


CURRENT POSITION DISPLAY DOES NOT APPEAR

INSPECTION PROCEDURE

1 CHECK THE MAP DISC

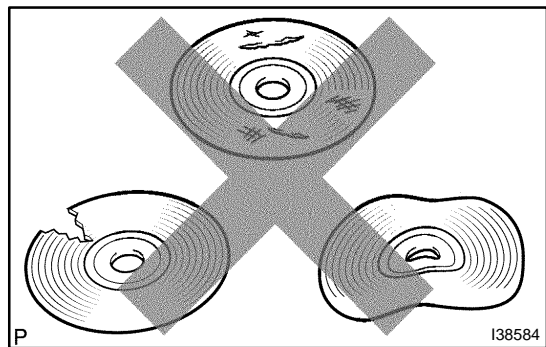

- (a) Check that the map disc is not deformed or cracked.
OK: No deformations or cracks appear on the map disc.

NG → REPLACE THE MAP DISC

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE [05-1873](#))