


# GYRO ERROR

## INSPECTION PROCEDURE

### 1 NAVIGATION CHECK MODE(VEHICLE SENSORS)

(a) Enter the "Navigation Check" mode (Vehicle Sensors) (see page 05-1859).

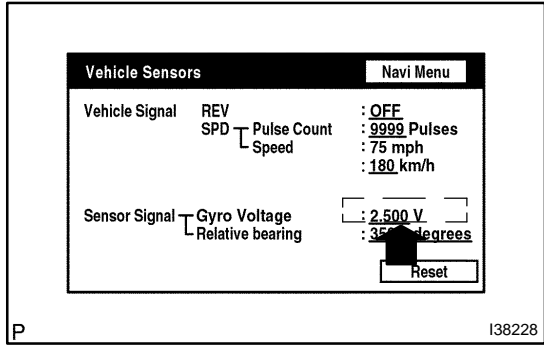

(b) Check the gyro voltage.  
**Standard: 0.1 to 4.5 V**

**NG** → **REPLACE NAVIGATION ECU (SEE PAGE 67-23)**

**OK**

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN DIAGNOSTIC TROUBLE CODE CHART (SEE PAGE 05-1888)**