## **PROBLEM SYMPTOMS TABLE**

05J3G-	)1

05-2077

Symptom	Suspected Area	See Page
All doors lock/unlock functions do not operate via master switch	<ol> <li>DOOR fuse</li> <li>DOME fuse</li> <li>Power window regulator master switch assy</li> <li>Wire harness</li> <li>Instrument panel J/B assy (Multiplex network body ECU)</li> </ol>	05–2095
All doors lock/unlock functions do not operate via door control switch	<ol> <li>Door control switch assy</li> <li>Wire harness</li> <li>Instrument panel J/B assy (Multiplex network body ECU)</li> </ol>	05–2098
All doors lock/unlock functions do not operate via driver side door key cylinder	<ol> <li>Front door lock assy LH</li> <li>Wire harness</li> <li>Instrument panel J/B assy (Multiplex network body ECU)</li> </ol>	05–2100
Only driver door lock/unlock functions do not operate	<ol> <li>Front door lock assy LH</li> <li>Wire harness</li> <li>Instrument panel J/B assy (Multiplex network body ECU)</li> </ol>	05–2103
Only passenger door lock/unlock functions do not operate	<ol> <li>Front door lock assy RH</li> <li>Wire harness</li> <li>Instrument panel J/B assy (Multiplex network body ECU)</li> </ol>	05–2107
Only rear LH door lock/unlock functions do not operate	<ol> <li>Rear door lock assy LH</li> <li>Wire harness</li> <li>Instrument panel J/B assy (Multiplex network body ECU)</li> </ol>	05–2111
Only rear RH door lock/unlock functions do not operate	<ol> <li>Rear door lock assy RH</li> <li>Wire harness</li> <li>Instrument panel J/B assy (Multiplex network body ECU)</li> </ol>	05–2115
Only luggage door lock/unlock functions do not operate	<ol> <li>Luggage compartment door lock assy</li> <li>Luggage compartment door opener switch (w/o smart key system)</li> <li>Luggage electrical key switch (w/ smart key system)</li> <li>Wire harness</li> <li>Instrument panel J/B assy (Multiplex network body ECU)</li> </ol>	05–2119
Key lock–in prevention function does not work properly (manual operation and key–linked lock are activated)	<ol> <li>Key slot</li> <li>Front door courtesy lamp switch assy LH</li> <li>Wire harness</li> <li>Instrument panel J/B assy (Multiplex network body ECU)</li> </ol>	05–2125

2241