

DTC	B2795	UNMATCHED KEY CODE
------------	--------------	---------------------------

CIRCUIT DESCRIPTION

This DTC is output when a key with a key code that has not been registered in the ECU is inserted into the key slot.

DTC No.	DTC Detection Condition	Trouble Area
B2795	Key with unregistered code is inserted	Smart key (Door control transmitter)

INSPECTION PROCEDURE

1	DELETE DTC AND INSERT ALL PRESENTLY AVAILABLE KEYS INTO KEY SLOT TO CHECK WHETHER HYBRID CONTROL SYSTEM STARTS OR NOT
---	--

OK:

Power switch's power mode can be changed to ON (ACC and IG) and hybrid control system can be started.

NG	REPLACE KEY THAT CANNOT START HYBRID CONTROL SYSTEM
-----------	--

OK

END