REPLACEMENT

Emergency Key

Release Knob


05J6P-01


1. REMOVE TRANSMITTER BATTERY

NOTICE:


B80552

Take extra care when handling these precision electronic components.

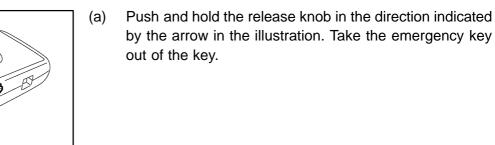


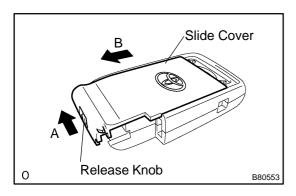

(b) Push and hold the release knob in the direction indicated by the arrow labeled A in the illustration. Push out the slide cover in the direction indicated by the arrow labeled B in the illustration and remove the slide cover.

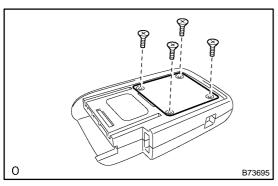

(c) Remove the 4 screws and cover using a screwdriver, as shown in the illustration.

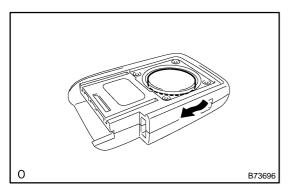


(d) Remove the transmitter's battery from the key, as shown in the illustration.

NOTICE:

- Do not push the terminals with your finger.
- Do not forcibly pry up the battery (lithium battery).
 The terminals may become damaged.
- Do not touch the battery with wet hands. Water may cause rust.
- Do not touch or move any components inside the transmitter, as it may cease to work.

2004 Prius - Preliminary Release (RM1075U)

Author: Date: 2467

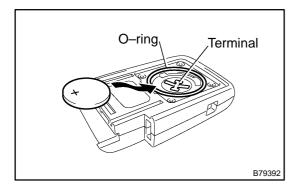

2. INSTALL TRANSMITTER BATTERY


(a) Install a new battery (lithium battery) with the positive (+) side up, as shown in the illustration.

NOTICE:


- Be sure that the positive side and the negative side of the transmitter battery are matched up correctly.
- Be careful not to bend the transmitter battery electrode during insertion.
- Keep the transmitter case interior free of dust and oil.
- (b) Check that the O-ring is not distorted or slipped off, and install the cover.
- (c) Using a screwdriver, tighten the 4 screws.

NOTICE:

Incomplete installation of the cover will cause defective contact between the battery (lithium battery) and terminal.

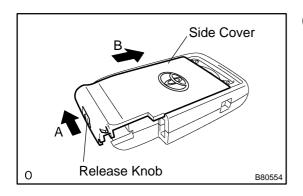

(d) Push and hold the release knob in the direction indicated by the arrow labeled A in the illustration. Push in the slide cover in the direction indicated by the arrow labeled B in the illustration and install the slide cover.

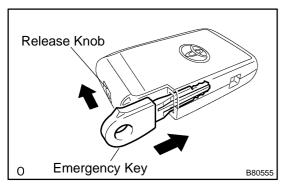

(e) Push and hold the release knob in the direction indicated by the arrow in the illustration. Insert the emergency key into the key.

HINT:

After installation, press any of the transmitter's switches. Check that the LED illuminates.

2004 Prius - Preliminary Release (RM1075U)

Author: Date: 2468