

DTC	P0A90/242	DRIVE MOTOR "A" PERFORMANCE
------------	------------------	------------------------------------

CIRCUIT DESCRIPTION

Refer to DTC P0A90 (INF 239) on page [05-663](#).

DTC No.	INF Code	DTC Detection Condition	Trouble Area
P0A90	242	Planetary gear locked	• HV transaxle assembly

INSPECTION PROCEDURE

If the information (INF) code is present, replace the HV transaxle assembly.

REPLACE HYBRID VEHICLE TRANSAXLE ASSY (See page 22-11)
