

DTC	C1581	ASSIST MAP NUMBER UN-WRITING
------------	--------------	-------------------------------------

CIRCUIT DESCRIPTION

The power steering ECU Assy outputs this DTC when it determines that assist map is not written in the ECU. It is necessary to replace the power steering ECU Assy when this code is output because this malfunction cannot be repaired.

HINT:

The assist map is data written in the power steering ECU Assy to control assisting power. The assist map is selected from four types based on the vehicle specification communication data (designation and grade package information).

DTC No.	DTC Detection Item	Trouble Area
C1581	Assist map is not written in the power steering ECU Assy.	Power steering ECU Assy

INSPECTION PROCEDURE

1	RECONFIRM DTC (SEE PAGE 05-1220)
----------	---

- (a) Check for DTCs.

OK:

DTCs other than C1581 are not output.

NG

REPAIR CIRCUIT INDICATED BY OUTPUT CODE (SEE PAGE 05-1226)

OK

REPLACE POWER STEERING ECU ASSY (SEE PAGE 50-16)
