

DIAGNOSTIC TROUBLE CODE CHART

HINT:

If a trouble code is displayed during the DTC check, inspect the circuit listed for that code. For details of each code, refer to the "See page" under respective "DTC No." in the DTC chart.

DTC No. (See page)	Detection Item	Trouble Area
C1511 (05-1227)	Torque sensor abnormal	<ul style="list-style-type: none"> Steering column assy (Torque sensor) Power steering ECU assy
C1512 (05-1227)	Torque sensor abnormal	<ul style="list-style-type: none"> Steering column assy (Torque sensor) Power steering ECU assy
C1513 (05-1227)	Torque sensor abnormal	<ul style="list-style-type: none"> Steering column assy (Torque sensor) Power steering ECU assy
C1514 (05-1227)	Torque sensor power supply abnormal	<ul style="list-style-type: none"> Steering column assy (Torque sensor) Power steering ECU assy
C1515 (05-1231)	Torque sensor zero point adjustment undone	–
C1516 (05-1232)	Torque sensor zero point adjustment incomplete	–
C1517 (05-1227)	Torque hold abnormal	<ul style="list-style-type: none"> Steering column assy (Torque sensor) Power steering ECU assy
C1524 (05-1233)	Motor abnormal	<ul style="list-style-type: none"> Power steering motor Power steering ECU assy
C1531 (05-1235)	ECU abnormal	Power steering ECU assy
C1532 (05-1235)	ECU abnormal	Power steering ECU assy
C1533 (05-1235)	ECU abnormal	Power steering ECU assy
C1534 (05-1235)	ECU abnormal	Power steering ECU assy
C1551 (05-1236)	IG power source voltage abnormal	<ul style="list-style-type: none"> ECU-IG fuse IG power source circuit Power steering ECU assy
C1552 (05-1238)	PIG power supply voltage abnormal	<ul style="list-style-type: none"> EPS fuse PIG power source circuit Power steering ECU assy
C1554 (05-1238)	Power supply relay failure	<ul style="list-style-type: none"> EPS fuse PIG power source circuit Power steering ECU assy
C1555 (05-1238)	Motor relay welding failure	<ul style="list-style-type: none"> EPS fuse PIG power source circuit Power steering ECU assy
C1581 (05-1240)	Assist map number un-writing	Power steering ECU assy
U0073 (05-1241)	Control module communication bus off	–
U0121 (05-1241)	Lost communication with anti-lock brake system (ABS) control module	–