


VACUUM SWITCHING VALVE ASSY NO.2 (1NZ-FXE)

120DS-01

REPLACEMENT

1. REMOVE REAR FLOOR BOARD NO.2 (See page 19-2)
2. REMOVE DECK FLOOR BOX REAR (See page 19-2)
3. REMOVE REAR FLOOR BOARD NO.3 (See page 19-2)
4. DISCONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL) (See page 19-2)

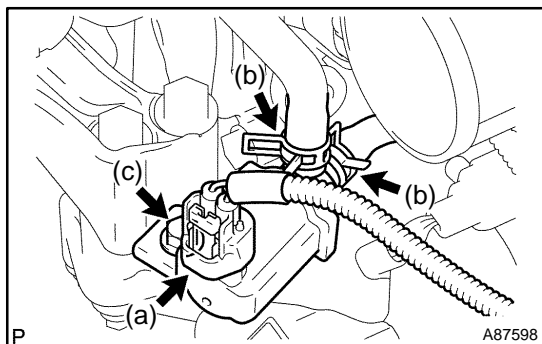

5. REMOVE VACUUM SWITCHING VALVE ASSY NO.2
 - (a) Disconnect the VSV connector.
 - (b) Disconnect the 2 fuel vapor feed hoses No. 1 from the vacuum switching valve No. 2.
 - (c) Remove the bolt, then remove the vacuum switching valve No. 2.

6. INSTALL VACUUM SWITCHING VALVE ASSY NO.2
Torque: 7.5 N·m (76 kgf·cm, 66 in·lbf)
7. CONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL) (See page 19-2)
8. INSTALL REAR FLOOR BOARD NO.3
9. INSTALL DECK FLOOR BOX REAR
10. INSTALL REAR FLOOR BOARD NO.2
11. POWER WINDOW CONTROL SYSTEM INITIALIZE (See page 01-28)