


HEATED OXYGEN SENSOR (1NZ-FXE)

120DP-01


REPLACEMENT

1. REMOVE REAR FLOOR BOARD NO.2 (See page 19-2)
2. REMOVE DECK FLOOR BOX REAR (See page 19-2)
3. REMOVE REAR FLOOR BOARD NO.3 (See page 19-2)
4. DISCONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL) (See page 19-2)
5. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER (See page 71-13)

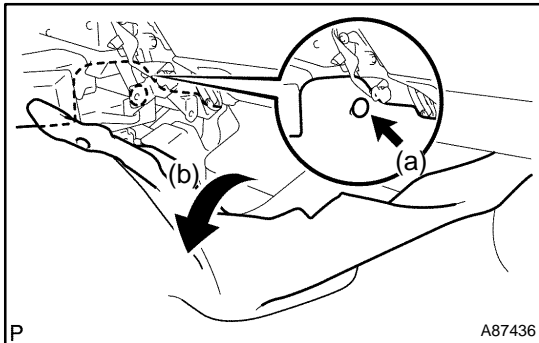


6. REMOVE HEATED OXYGEN SENSOR


- (a) Using a clip remover, remove the clip.
- (b) Pull off the floor carpet front.

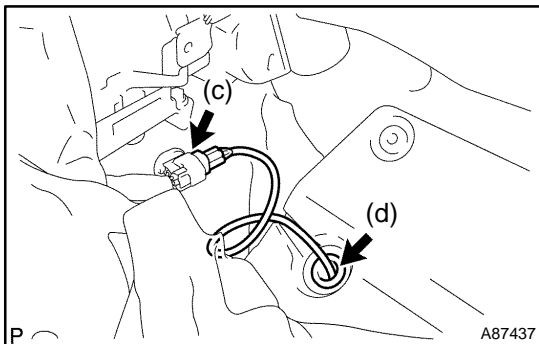

- (c) Disconnect the heated oxygen sensor connector.
- (d) Remove the grommet of the heated oxygen sensor from the vehicle.

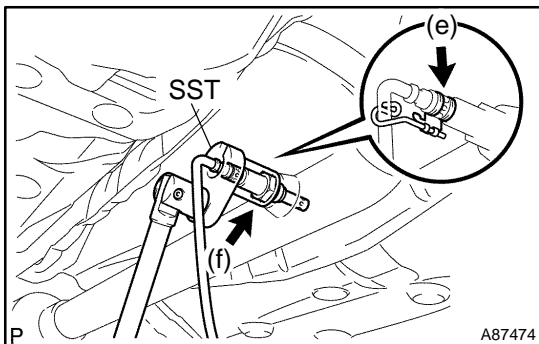

- (e) Remove the wire harness clamp bracket from the heated oxygen sensor.
- (f) Using SST, remove the heated oxygen sensor.
SST 09224-00010

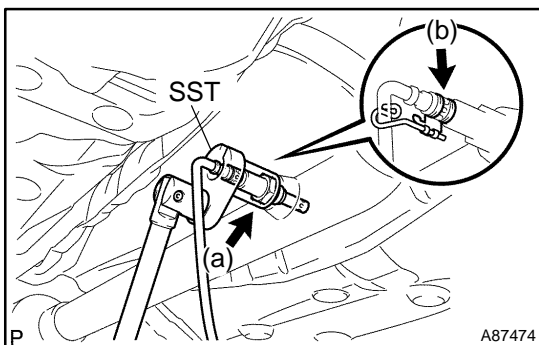

7. INSTALL HEATED OXYGEN SENSOR

- (a) Using SST, install the heated oxygen sensor.
SST 09224-00010
Torque: 44 N·m (450 kgf·cm, 33 in·lbf)
- (b) Install the wire harness clamp bracket to the heated oxygen sensor.
- (c) Install the grommet of the heated oxygen sensor to the vehicle.
- (d) Connect the heated oxygen sensor connector.
- (e) Install the floor carpet front with the clip.

8. CONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL) (See page 19-2)
9. CHECK FOR EXHAUST GAS LEAKS
10. INSTALL INSTRUMENT PANEL FINISH PANEL LOWER CENTER
11. INSTALL REAR FLOOR BOARD NO.3
12. INSTALL DECK FLOOR BOX REAR
13. INSTALL REAR FLOOR BOARD NO.2
14. POWER WINDOW CONTROL SYSTEM INITIALIZE (See page 01-28)