


REPLACEMENT


1. **DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM (SEE PAGE 55-17)**
SST 07110-58060 (07117-58080, 07117-58090, 07117-78050, 07117-88060, 07117-88070, 07117-88080)
2. **DISCONNECT SUCTION HOSE SUB-ASSY (SEE PAGE 55-17)**
SST 09870-00015
3. **DISCONNECT COOLER REFRIGERANT LIQUID PIPE E (TO COOLER UNIT) (SEE PAGE 55-17)**
SST 09870-00025
4. **DISCONNECT HEATER WATER HOSE B (SEE PAGE 55-17)**
5. **DISCONNECT HEATER WATER HOSE A (SEE PAGE 55-17)**
6. **REMOVE REAR FLOOR BOARD NO.2 (SEE PAGE 21-116)**
7. **REMOVE DECK FLOOR BOX REAR (SEE PAGE 21-116)**
8. **REMOVE REAR FLOOR BOARD NO.3 (SEE PAGE 21-116)**
9. **DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)**
10. **REMOVE INSTRUMENT PANEL REGISTER ASSY NO.1 (SEE PAGE 71-7)**
11. **REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSY LOWER (SEE PAGE 71-7)**
12. **REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSY UPPER (SEE PAGE 71-7)**
13. **REMOVE INSTRUMENT PANEL REGISTER ASSY NO.3 (SEE PAGE 71-7)**
14. **REMOVE INSTRUMENT PANEL REGISTER ASSY NO.4 (SEE PAGE 71-7)**
15. **REMOVE INSTRUMENT PANEL REGISTER ASSY NO.2 (SEE PAGE 71-7)**
16. **REMOVE MULTI-DISPLAY ASSY (SEE PAGE 71-7)**
17. **REMOVE GLOVE COMPARTMENT DOOR STOPPER SUB-ASSY (SEE PAGE 71-7)**
18. **REMOVE GLOVE COMPARTMENT DOOR ASSY (SEE PAGE 71-7)**
19. **REMOVE GLOVE COMPARTMENT DOOR (SEE PAGE 71-7)**
20. **REMOVE INSTR PANEL SPEAKER PANEL SUB-ASSY NO.1 W/CTR SPEAKER (SEE PAGE 71-7)**
21. **REMOVE FRONT PILLAR GARNISH CORNER PIECE LH (SEE PAGE 71-7)**
22. **REMOVE FRONT PILLAR GARNISH CORNER PIECE RH (SEE PAGE 71-7)**
23. **REMOVE FRONT PILLAR GARNISH LH (SEE PAGE 71-7)**
24. **REMOVE FRONT PILLAR GARNISH RH (SEE PAGE 71-7)**
25. **DISCONNECT PASSENGER AIRBAG CONNECTOR (SEE PAGE 71-7)**
26. **REMOVE INSTRUMENT PANEL SUB-ASSY W/PASSENGER AIRBAG ASSY (SEE PAGE 71-7)**
27. **REMOVE STEERING WHEEL COVER LOWER NO.2 (SEE PAGE 60-20)**
28. **REMOVE STEERING WHEEL COVER LOWER NO.3 (SEE PAGE 60-20)**
29. **REMOVE HORN BUTTON ASSY (SEE PAGE 60-20)**
30. **REMOVE STEERING WHEEL ASSY (SEE PAGE 50-8)**
SST 09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05021)
31. **REMOVE TILT LEVER BRACKET (SEE PAGE 50-8)**
32. **REMOVE STEERING COLUMN COVER (SEE PAGE 50-8)**
33. **REMOVE TURN SIGNAL SWITCH ASSY W/SPIRAL CABLE SUB-ASSY (SEE PAGE 50-8)**
34. **REMOVE FRONT DOOR SCUFF PLATE LH (SEE PAGE 76-28)**
35. **REMOVE FRONT DOOR SCUFF PLATE RH (SEE PAGE 76-28)**
36. **REMOVE COWL SIDE TRIM BOARD LH (SEE PAGE 76-28)**
37. **REMOVE COWL SIDE TRIM BOARD RH (SEE PAGE 76-28)**
38. **REMOVE INSTRUMENT CLUSTER FINISH PANEL ASSY CENTER (SEE PAGE 71-13)**
39. **REMOVE RADIO RECEIVER ASSY W/STEREO OPENING COVER (SEE PAGE 71-13)**
40. **REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER (SEE PAGE 71-13)**

41. REMOVE GLOVE COMPARTMENT DOOR LOCK COVER (SEE PAGE 71-13)
42. REMOVE GLOVE COMPARTMENT DOOR LOCK ASSY (SEE PAGE 71-13)
43. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER (SEE PAGE 71-13)
44. REMOVE INSTRUMENT PANEL UNDER COVER SUB-ASSY NO.1 (SEE PAGE 71-13)
45. REMOVE POWER STEERING ECU ASSY (SEE PAGE 50-16)
46. REMOVE SHIFT LEVER ASSY LWR (SEE PAGE 22-69)
47. REMOVE AIR DUCT REAR NO.3 (SEE PAGE 55-17)
48. REMOVE HEATER TO REGISTER DUCT NO.3 (SEE PAGE 55-17)
49. REMOVE HEATER TO REGISTER DUCT NO.1 (SEE PAGE 55-17)
50. REMOVE HEATER TO REGISTER DUCT NO.2 (SEE PAGE 55-17)
51. REMOVE DEFROSTER NOZZLE ASSY (SEE PAGE 55-17)
52. REMOVE TRANSMISSION CONTROL ECU ASSY
53. REMOVE ECM (SEE PAGE 10-24)
54. REMOVE NETWORK GATEWAY ECU (SEE PAGE 67-26)
55. REMOVE INSTRUMENT PANEL BRACE SUB-ASSY NO.1 (SEE PAGE 55-17)
56. REMOVE AIR CONDITIONING AMPLIFIER ASSY (SEE PAGE 55-47)
57. REMOVE STEERING COLUMN ASSY (SEE PAGE 50-8)
58. REMOVE INSTRUMENT PANEL REINFORCEMENT ASSY (SEE PAGE 55-17)
59. REMOVE FRONT SEAT ASSY LH (SEE PAGE 72-2)
60. REMOVE FRONT SEAT ASSY RH
61. REMOVE CONSOLE PANEL SUB-ASSY UPPER (SEE PAGE 71-17)
62. REMOVE CONSOLE BOX POCKET (SEE PAGE 71-17)
63. REMOVE CONSOLE BOX CARPET (SEE PAGE 71-17)
64. REMOVE CONSOLE BOX ASSY RR (SEE PAGE 71-17)
65. REMOVE FRONT FLOOR FOOTREST (SEE PAGE 50-8)
66. REMOVE AIR BAG ECU ASSY (SEE PAGE 60-54)
67. REMOVE YAWRATE SENSOR (W/ VSC) (SEE PAGE 32-70)
68. REMOVE CONSOLE BOX MOUNTING BRACKET NO.1 (SEE PAGE 33-6)
69. REMOVE PARKING BRAKE CONTROL PEDAL ASSY (SEE PAGE 33-6)

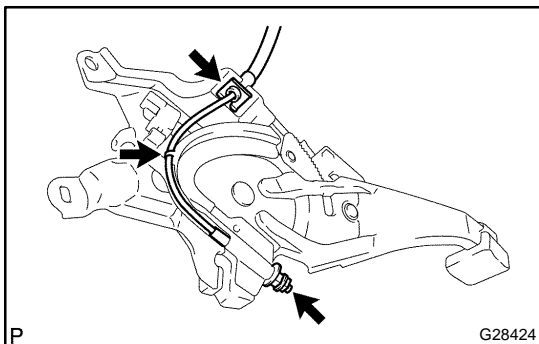

70. REMOVE PARKING BRAKE CABLE ASSY NO.1

- (a) Unbend the parking brake pedal claw.
- (b) Remove the lock nut and adjusting nut of the parking brake cable assy No.1 from the parking brake pedal.
- (c) Disengage the clip and remove the parking brake cable assy No.1 from the parking brake pedal assy.

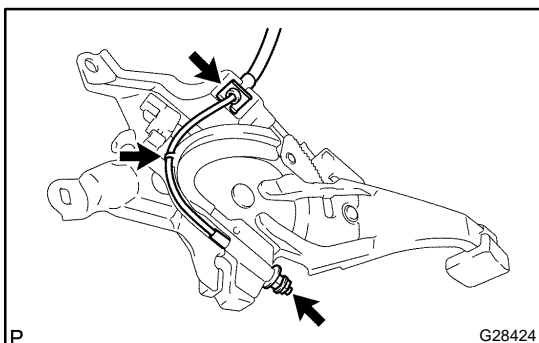

71. INSTALL PARKING BRAKE CABLE ASSY NO.1

- (a) Thread the parking brake cable assy No.1 through the pedal bracket and hold it with a new clip.
- (b) Thread the parking brake cable through the pedal guide. Temporarily tighten the adjusting nut and lock nut.

HINT:

Fully tighten the adjusting nut and lock nut when adjusting the parking brake pedal free play.

- (c) Bend the parking brake pedal claw fully.

72. INSTALL PARKING BRAKE CONTROL PEDAL ASSY (SEE PAGE 33-6)
73. INSTALL CONSOLE BOX MOUNTING BRACKET NO.1 (SEE PAGE 33-6)
74. INSTALL YAWRATE SENSOR (W/ VSC) (SEE PAGE 32-70)
75. INSTALL AIR BAG ECU ASSY (SEE PAGE 60-54)
76. INSTALL FRONT FLOOR FOOTREST (SEE PAGE 50-8)
77. INSTALL FRONT SEAT ASSY LH (SEE PAGE 72-2)
78. INSTALL FRONT SEAT ASSY RH
79. INSTALL INSTRUMENT PANEL REINFORCEMENT ASSY (SEE PAGE 55-17)
80. INSTALL INSTRUMENT PANEL BRACE SUB-ASSY NO.1 (SEE PAGE 55-17)
81. FULLY TIGHTEN AIR CONDITIONER UNIT ASSY (SEE PAGE 55-17)
82. INSTALL STEERING COLUMN ASSY (SEE PAGE 50-8)
83. INSTALL INSTRUMENT PANEL SUB-ASSY LOWER (SEE PAGE 71-13)
84. INSTALL SHIFT LEVER ASSY LWR (SEE PAGE 22-69)
85. INSTALL POWER STEERING ECU ASSY (SEE PAGE 50-16)
86. INSTALL INSTRUMENT PANEL SUB-ASSY W/PASSENGER AIRBAG ASSY (SEE PAGE 71-7)
87. INSTALL COOLER REFRIGERANT LIQUID PIPE E (TO COOLER UNIT) (SEE PAGE 55-17)
88. INSTALL SUCTION HOSE SUB-ASSY (SEE PAGE 55-17)
89. INSPECT LEAKAGE OF REFRIGERANT (SEE PAGE 55-17)
90. ADJUST SPIRAL CABLE SUB-ASSY (SEE PAGE 60-29)
91. INSTALL STEERING COLUMN COVER (SEE PAGE 50-8)
92. INSTALL TILT LEVER BRACKET (SEE PAGE 50-8)
93. INSTALL STEERING WHEEL ASSY (SEE PAGE 50-8)
94. INSTALL HORN BUTTON ASSY (SEE PAGE 60-20)
95. INSPECT HORN BUTTON ASSY (SEE PAGE 60-20)
96. CONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 19-2)
97. INSTALL REAR FLOOR BOARD NO.3
98. INSTALL DECK FLOOR BOX REAR
99. INSTALL REAR FLOOR BOARD NO.2
100. ADD ENGINE COOLANT
101. CHARGE REFRIGERANT (SEE PAGE 55-17)
SST 07110-58060 (07117-58060, 07117-58070, 07117-58080, 07117-58090, 07117-78050,
07117-88060, 07117-88070, 07117-88080)
102. CHECK FOR ENGINE COOLANT LEAKS
103. WARM UP ENGINE
104. INSPECT AND ADJUST PARKING BRAKE PEDAL TRAVEL (SEE PAGE 33-2)
105. INSPECT SRS WARNING LIGHT (SEE PAGE 05-1397)
106. PERFORM CALIBRATION OF TORQUE SENSOR ZERO POINT (SEE PAGE 05-1211)
107. PERFORM INITIALIZATION (SEE PAGE 01-28)