

PROBLEM SYMPTOMS TABLE

Symptom	Suspected Area	See Page
Driver side seat belt warning lamp does not blink	<ol style="list-style-type: none"> 1. DOME fuse 2. GAUGE fuse 3. Front seat inner belt assy (driver's seat) 4. Combination meter 5. Wire harness 	61-1 61-1 61-6 05-2011 –
Driver side seat belt warning lamp does not illuminate	<ol style="list-style-type: none"> 1. Front seat inner belt assy (driver's seat) 2. Combination meter 3. Wire harness 	61-6 05-2011 –
Passenger side seat belt warning lamp does not blink	<ol style="list-style-type: none"> 1. DOME fuse 2. GAUGE fuse 3. Front seat inner belt assy (passenger's seat) 4. Occupant detection sensor 5. Combination meter 6. Wire harness 	61-1 61-1 61-6 61-6 05-2013 –
Passenger side seat belt warning lamp does not illuminate	<ol style="list-style-type: none"> 1. Front seat inner belt assy (passenger's seat) 2. Combination meter 3. Wire harness 	61-6 05-2013 –