
LICENSE PLATE LAMP LENS REPLACEMENT

HINT:

Parts are shown for the LH side only. The LH and RH side are symmetrical.

- 1. REMOVE BACK DOOR TRIM BOARD ASSY (SEE PAGE 75-33)
- 2. REMOVE BACK DOOR GARNISH SUB-ASSY OUTSIDE (SEE PAGE 76-23)

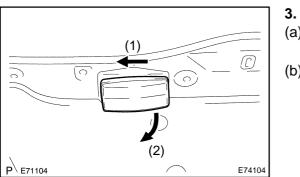

. REMOVE LICENSE PLATE LAMP LENS

- (a) Push the license plate lamp assy in the direction indicated by the arrow in the illustration and remove it.
- (b) Disconnect the license plate lamp socket & wire and bulb. Remove the license plate lamp lens.

65125-01