PROBLEM SYMPTOMS TABLE

1. FRONT WIPER AND WASHER SYSTEM

Symptom	Suspected Area	See page
Both front wipers and washer systems do not operate.	 Windshield Wiper Switch Assy Wire Harness or connector 	66–10 –
Front wipers do not operate when the windshield washer is nor- mal.	 WIP fuse Windshield wiper switch assy Windshield wiper motor assy Wire harness or connector 	- 66-10 66-10 -
Front wipers do not operate in LO or HI.	 Windshield Wiper Switch Assy Windshield Wiper Motor Assy Wire Harness or connector 	66–10 66–10 –
Front wipers do not operate in INT.	 Windshield wiper switch assy Windshield wiper motor assy Wire harness or connector 	66–10 66–10 –
Windshield washer motor does not operate.	 WSH fuse Windshield wiper switch assy Windshield washer motor and pump assy Wire harness or connector 	- 66-10 66-8 -
Front wipers do not operate when a jet of washer fluid is emitted with the washer switch on.	 Windshield wiper switch assy Windshield wiper motor assy Wire harness or connector 	66–10 66–10 –
A jet of washer fluid is not emitted when windshield washer motor is normal.	1. Washer hose and nozzle	-
Wiper blade does not return or the return position is wrong when the windshield wiper switch is off.	 Windshield wiper arm installation position Windshield wiper motor assy Wire harness or connector 	66–14 66–10 –

2. REAR WIPER AND WASHER SYSTEM

Symptom	Suspected Area	See page
Both rear wiper and washer systems do not operate.	 Windshield wiper switch assy Wire harness or connector 	66–10 –
Rear wiper does not operate in INT or ON.	 Windshield wiper switch assy Rear wiper motor assy Wire harness or connector 	66–10 66–10 –
Rear washer motor does not operate.	 WSH fuse Windshield wiper switch assy Windshield washer motor and pump assy Wire harness or connector 	_ 66–10 66–10 _
A jet of washer fluid is not emitted when rear washer motor is normal.	1. Washer hose and nozzle	-
Wiper blade does not return or the return position is wrong when the rear wiper switch is off.	 Rear wiper arm installation position Rear wiper motor assy Wire harness or connector 	66–19 66–10 –

66–7