
REAR WIPER RUBBER REPLACEMENT

660HI -0

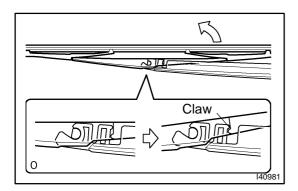


1. REMOVE RR WIPER BLADE

(a) Raise the rear wiper blade to the position as shown in the illustration where the meshing of the claw disengages with a clicking sound. [*1]

NOTICE:


Be careful not to break the claw.

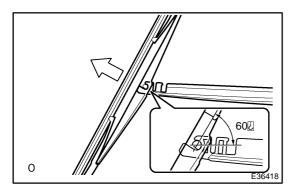

(b) Pull the rear wiper blade straight away from the rear wiper arm towards the left side of the vehicle at condition [*1].

NOTICE:

Do not fold the rear wiper arm with the rear wiper blade removed from it.

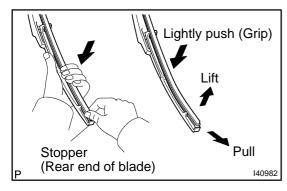

2. REMOVE REAR WIPER RUBBER

(a) Pull the end of the wiper rubber protruding from the blade stopper as shown in the illustration.

NOTICE:

Do not pull out the wiper rubber forcibly. If you do, the backing plates will be deformed or the blade claws will be damaged.

HINT:


Lightly pushing the rubber from the ends towards the middle will allow it to be removed more easily.

3. INSTALL REAR WIPER RUBBER

(a) Install rear wiper rubber backing plate No.1 and No.2 as shown in the illustration.


NOTICE:

Install the backing plates in the correct direction.

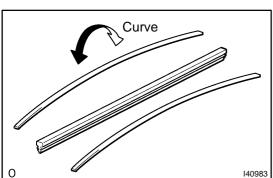


2004 Prius - Preliminary Release (RM1075U)

Author: Date: 915

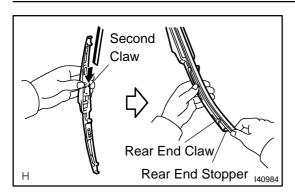

- (b) Insert the rear wiper rubber from the front end of the rear wiper blade to the rear end through the second claw.
- (c) After pushing the rear wiper rubber through the rear end side claw, allow it to stick out from the rear end stopper.

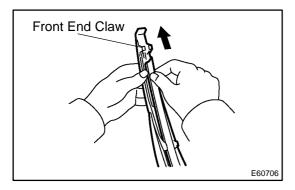

(d) Slide the rear wiper rubber through the front end claw.

Author: Date: 916