

# INSTRUMENT PANEL SUB-ASSY REPLACEMENT

710LN-01

HINT:


 
 
 
 
- Installation is in the reverse order of removal.
- COMPONENTS: SEE PAGE 71-1

## 1. TABLE OF BOLT, SCREW AND NUT

HINT:

All bolts, screws and nuts relevant to installing and removing the instrument panel are shown along with their alphabet code in the table below.


mm (in.) (L = Length)

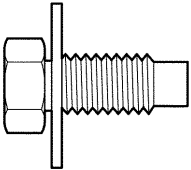Code	Shape	Code	Shape	Code	Shape
<A>	 <p><math>\phi = 8</math> (0.31) L = 20 (0.79)</p> <p>91633-60820</p>	<B>	 <p><math>\phi = 5</math> (0.20) L = 16 (0.63)</p> <p>B30768 93567- 15016</p>	<C>	 <p><math>\phi = 5</math> (0.20) L = 14 (0.55)</p> <p>B50922 93567- 55014</p>
<D>	 <p><math>\phi = 5</math> (0.20) L = 14 (0.55)</p> <p>93568-55014</p>	<E>	 <p><math>\phi = 5</math> (0.20) L = 18 (0.71)</p> <p>93568-55018</p>		

P


B74072

## 2. DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)

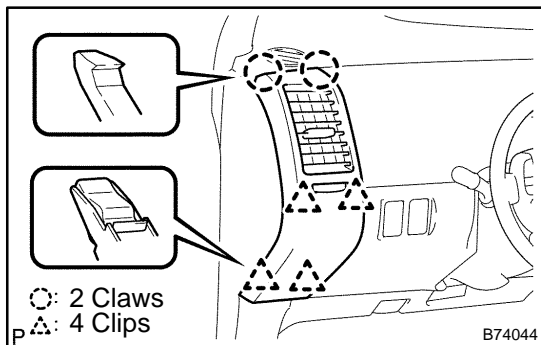


## 3. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.1

- Disengage the 2 claws and the 4 clips and then remove the instrument panel register assy No.1.

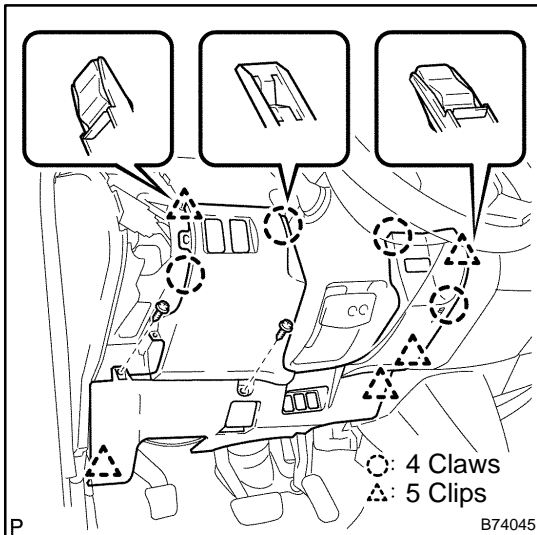


#### 4. REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSY LOWER

- Remove the 2 screws <E>.
- Disconnect the hood lock control cable assy.
- Disengage the 4 claws and the 5 clips.
- Disconnect all connectors and then remove the instrument panel finish panel sub-assy lower.

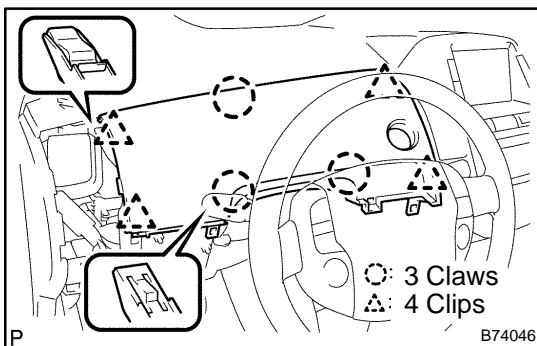


#### 5. REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSY UPPER

- Disengage the 3 claws and the 4 clips.
- Disconnect the connector and then remove the instrument panel finish panel sub-assy upper.

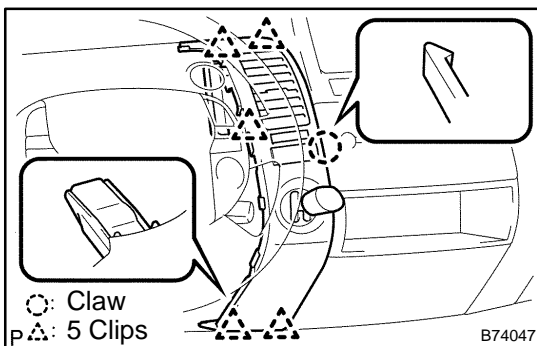


#### 6. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.3

- Disengage the claw and the 5 clips.
- Disconnect the connector and then remove the instrument panel register assy No.3

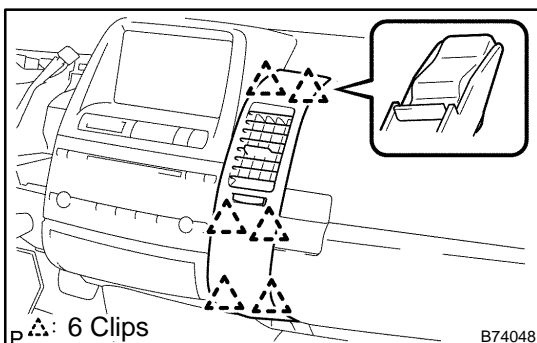

#### 7. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.4


- Disengage the 6 clips and then remove the instrument panel register assy No.4.

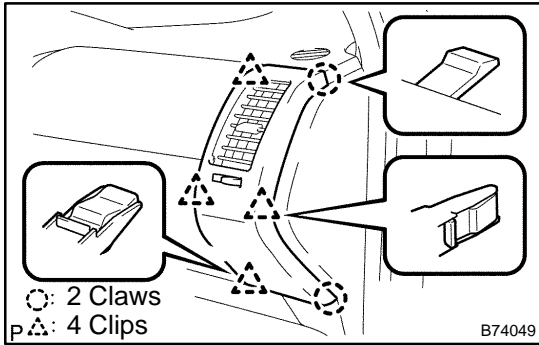

**8. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.2**


- (a) Disengage the 2 claws and the 4 clips, and then remove the instrument panel register assy No.2.

**9. REMOVE MULTI-DISPLAY ASSY (SEE PAGE 67-7)**

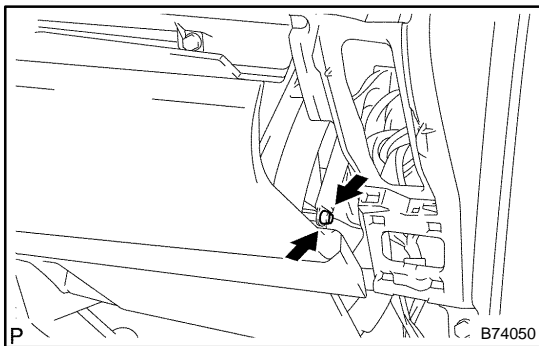


**10. REMOVE GLOVE COMPARTMENT DOOR STOPPER SUB-ASSY**

- (a) Holding the part indicated in the illustration, remove the glove compartment door stopper sub-assy from the glove compartment door assy.

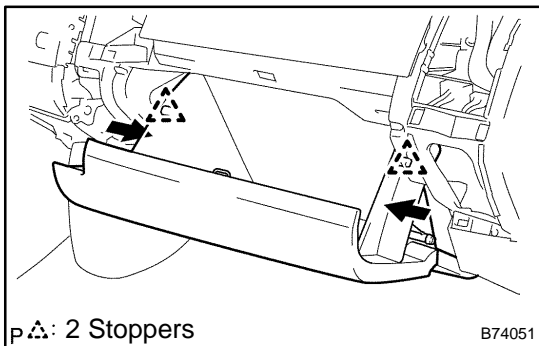

**11. REMOVE GLOVE COMPARTMENT DOOR ASSY**


- (a) Push in at the locations indicated by arrows in the illustration and remove the stoppers.

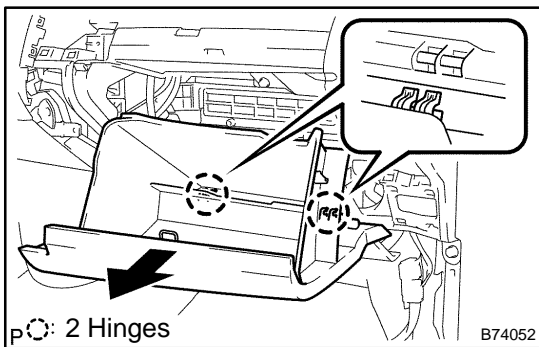

- (b) Pull in the direction indicated by the arrow in the illustration and disengage the 2 hinges. Remove the glove compartment door assy.

- 12. REMOVE INSTRUMENT PANEL CUSHION**
- 13. REMOVE INSTRUMENT CLUSTER FINISH PANEL END**
- 14. REMOVE INSTRUMENT PANEL HOLE COVER**


- (a) Using a screwdriver, remove the 2 instrument panel hole covers.

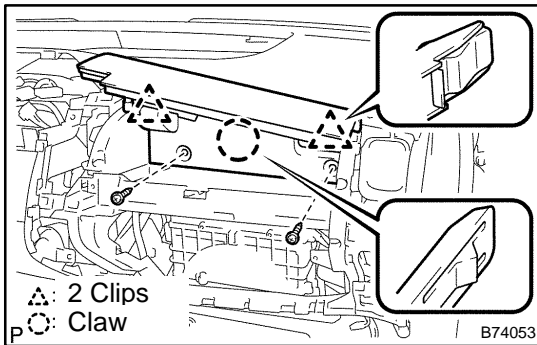
**15. REMOVE GLOVE COMPARTMENT DOOR**

- (a) Remove the 2 screws <C>.
- (b) Disengage the claw and the 2 clips, and then remove the glove compartment door.

**16. REMOVE INSTR PANEL SPEAKER PANEL SUB-ASSY NO.1 W/CTR SPEAKER (W/ JBL SOUND SYSTEM) (SEE PAGE 67-11)****17. REMOVE FRONT PILLAR GARNISH CORNER PIECE LH (SEE PAGE 76-28)****18. REMOVE FRONT PILLAR GARNISH CORNER PIECE RH (SEE PAGE 76-28)****19. REMOVE FRONT PILLAR GARNISH LH (SEE PAGE 76-28)****20. REMOVE FRONT PILLAR GARNISH RH (SEE PAGE 76-28)****21. DISCONNECT PASSENGER AIRBAG CONNECTOR (SEE PAGE 60-32)****22. REMOVE INSTRUMENT PANEL SUB-ASSY W/PASSENGER AIRBAG ASSY**

- (a) Remove the 3 screws <D>.
- (b) Remove the 2 bolts <A>.
- (c) Pulling up the instrument panel, disengage the 6 claws and the 3 clips.
- (d) Remove the instrument panel and passenger airbag as a single unit, being careful not to damage the steering wheel assy.

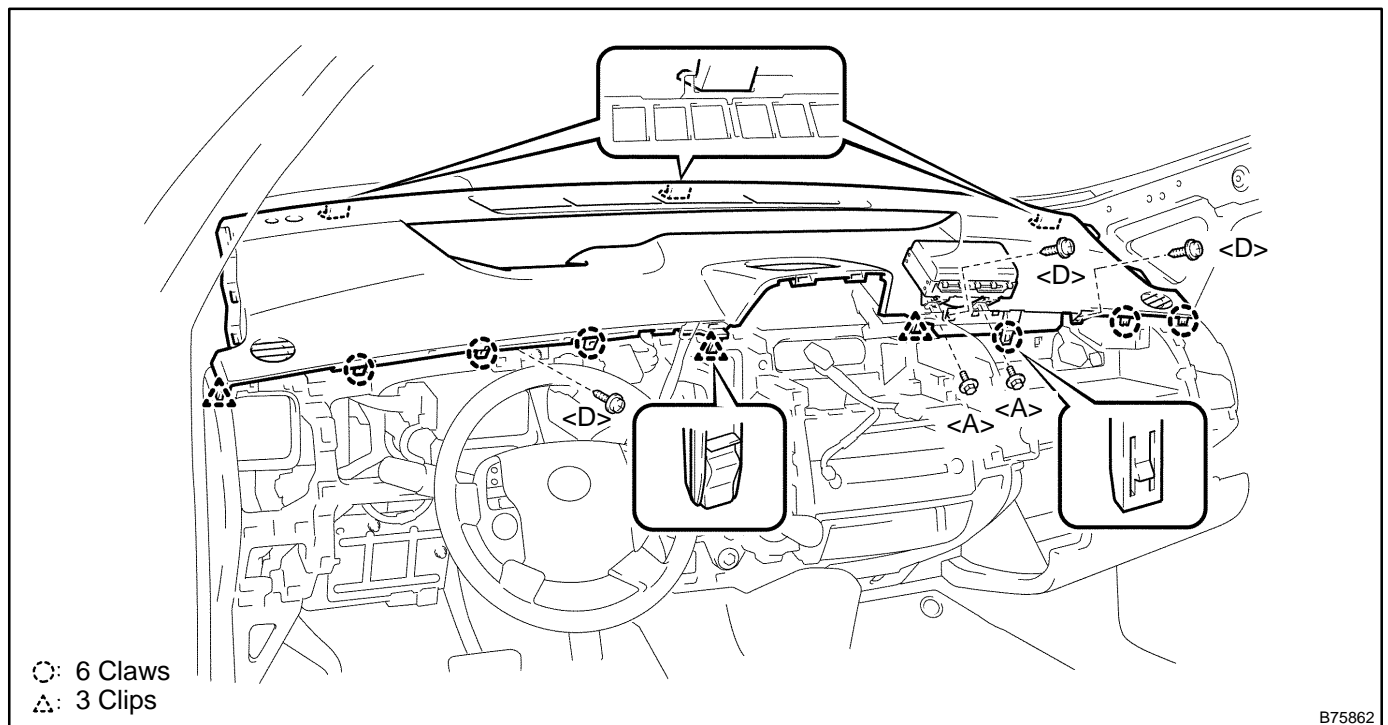

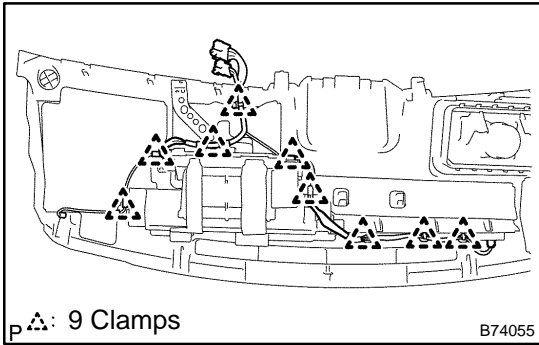


**23. REMOVE INSTRUMENT PANEL WIRE NO.2**

- (a) Disengage the 9 clamps and then remove the instrument panel wire No.2.


**24. REMOVE COOLER (SOLAR SENSOR) THERMISTOR**

**25. REMOVE AUTOMATIC LIGHT CONTROL SENSOR (W/ DAY TIME RUNNING LIGHT SYSTEM)**

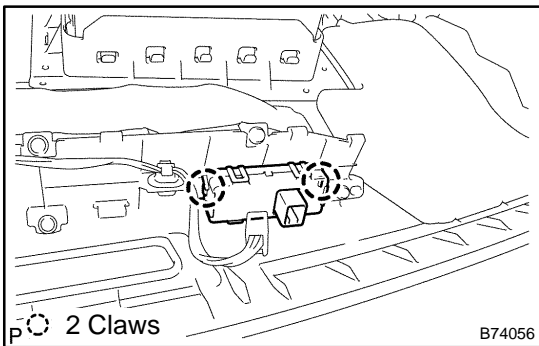


**26. REMOVE TELLTALE LAMP ASSY**

- (a) Disengage the 2 claws and then remove the telltale lamp assy.

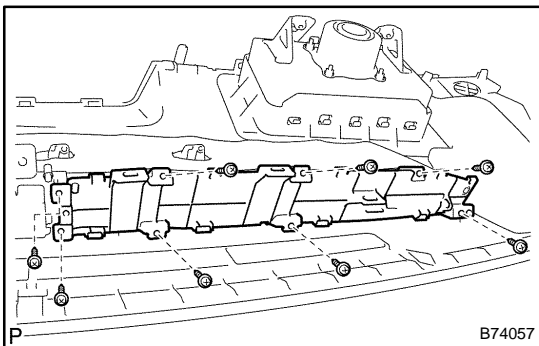


**27. REMOVE INSTRUMENT CLUSTER FINISH PANEL ASSY**

- (a) Remove the 8 screws <D> and then the instrument cluster finish panel assy.

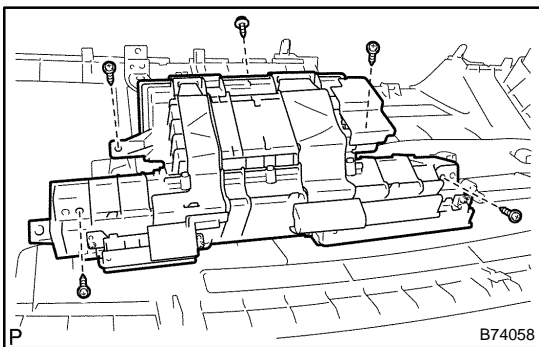

**28. REMOVE COMBINATION METER ASSY**

- (a) Remove the 5 screws <D> and then the combination meter assy.

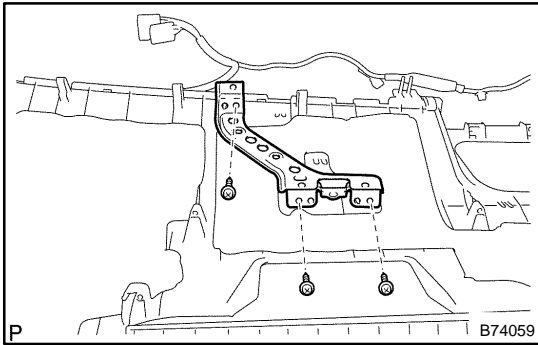

## 29. REMOVE INSTRUMENT PANEL MOUNTING BRACKET NO.1

- (a) Remove the 3 screws <D> and then the instrument panel mounting bracket No.1.

## 30. REMOVE NAVIGATION ANTENNA ASSY (W/ NAVIGATION SYSTEM) (SEE PAGE 67-22)

## 31. REMOVE INSTR PNL PASS L/DOOR AIR BAG ASSY (SEE PAGE 60-32)

## 32. REMOVE INSTRUMENT PANEL CUSHION NO.1

## 33. REMOVE INSTRUMENT PANEL CUSHION NO.2

## 34. REMOVE INSTRUMENT PANEL CUSHION NO.3

## 35. REMOVE INSTRUMENT PANEL CUSHION NO.4

## 36. REMOVE INSTRUMENT PANEL CUSHION NO.5

## 37. REMOVE INSTRUMENT PANEL SUB-ASSY


## 38. INSTALL INSTRUMENT PANEL SUB-ASSY W/PASSENGER AIRBAG ASSY

- (a) Securely fit the forward-facing instrument panel claws to the body.

- (b) Install the 3 screws <D>.

- (c) Install the 2 passenger airbag fastening bolts <A>.

**Torque: 20 N·m (204 kgf·cm, 15 ft·lbf)**

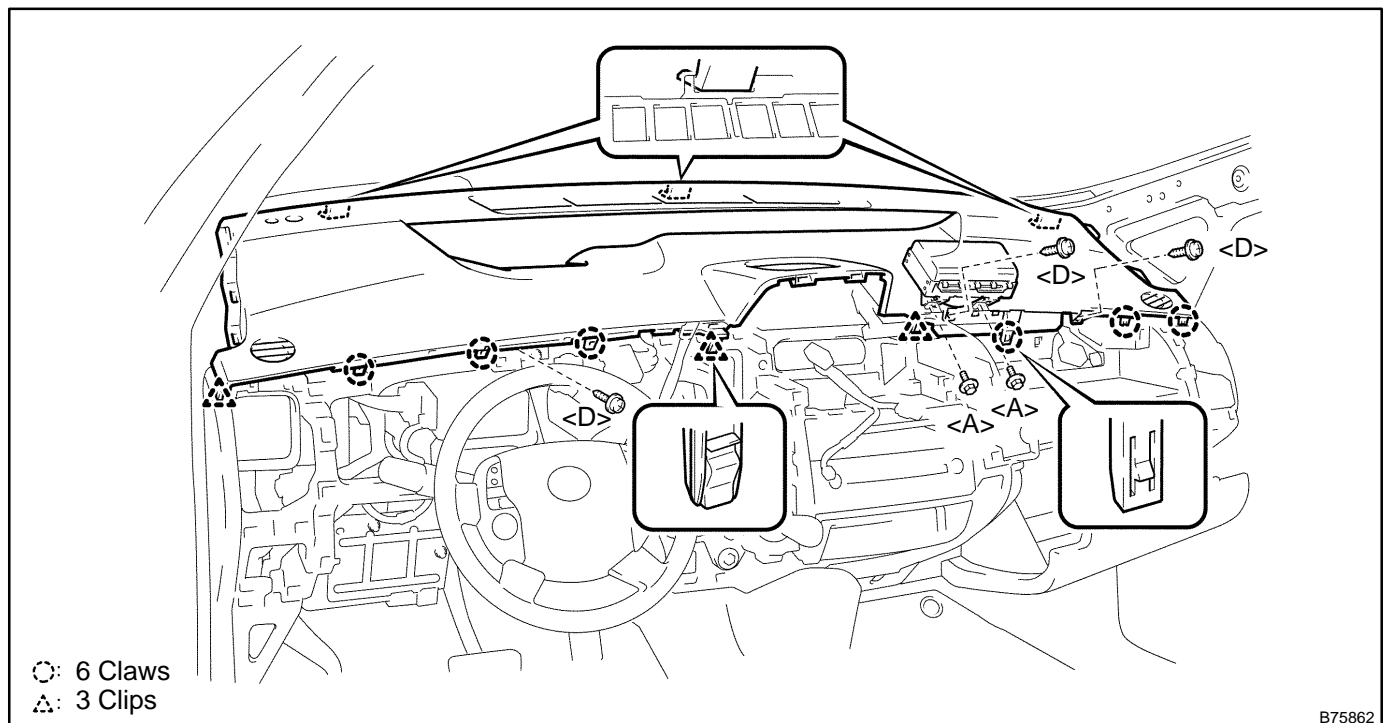

## 39. CONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 19-2)

## 40. INSPECT SRS WARNING LIGHT (SEE PAGE 05-1397)

## 41. PERFORM INITIALIZATION (SEE PAGE 01-28)