REPLACEMENT


HINT:

- The installation procedures are the removal procedures in reverse order.
- When replacing the spoiler, heat the body and spoiler using a heat light.

Heating temperature:

Item	Temperature
Spoiler No. 1 Side spoiler	40 to 60°C (104 to 140°F)
Bumper	20 to 30°C (68 to 86°F)


A bolt without a torque specification is shown in the standard bolt chart (see page 03–2).

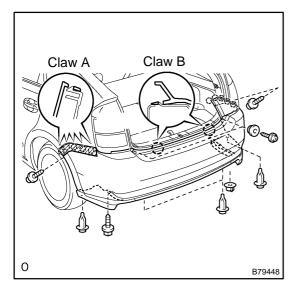

1. REMOVE REAR BUMPER COVER

- (a) Put protective tape under the quarter panel.
- (b) Remove the 2 screws and 2 stoppers.
- (c) Remove the clip, screw and side spoiler LH.
- (d) Remove the nut, clip and side spoiler RH.
- (e) Using a clip remover, remove the 4 clips.
- (f) Disengage the 10 claws labeled A and 2 claws labeled B. HINT:

Tape the screwdriver tip before use.

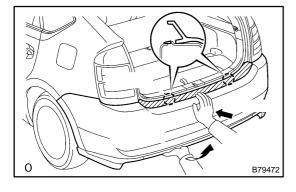


- (g) Engage the claw.
 - (1) Hold the rear bumper on its upper and lower parts with your hands as shown in the illustration.
 - (2) Pull up the rear bumper's lower part while holding its upper part securely.

NOTICE:

- Securely hold the rear bumper's upper part, otherwise the claw will not be disengaged.
- Forcibly pulling up the rear bumper will deform the claw.
- 2. REMOVE REAR BUMPER ENERGY ABSORBER
- 3. REMOVE REAR BUMPER BRACKET CENTER
- 4. REMOVE REAR BUMPER REINFORCEMENT SUB-ASSY
- (a) Remove the 4 nuts and reinforcement.
- 5. REMOVE REAR BUMPER ARM SUB-ASSY LH
- (a) Remove the 2 bolts and bumper arm.
- 6. REMOVE REAR BUMPER ARM SUB-ASSY RH
- (a) Remove the 2 bolts and bumper arm.
- 7. REMOVE REAR BUMPER SIDE RETAINER LH
- (a) Remove the 2 screws and side retainer.
- 8. REMOVE REAR BUMPER SIDE RETAINER RH
- (a) Remove the 2 screws and side retainer.

Author: Date: 1084

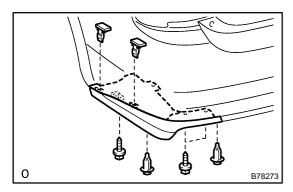


9. REMOVE REAR SIDE SPOILER LH

(a) Using a screwdriver, remove the 2 retainers.

HINT:

Tape the screwdriver tip before use.

b) Remove the 2 clips, 3 screws and side spoiler.

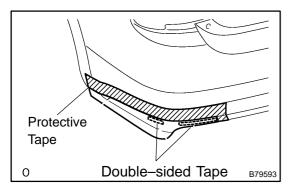

- (c) Put protective tape under the rear bumper.
- (d) Heat the spoiler.

NOTICE:

Do not heat the spoiler excessively.

- (e) Pull off the spoiler No. 1 by cutting the adhesive with a knife.
- (f) Remove the side spoiler.


10. REMOVE REAR SIDE SPOILER RH

(a) Using a screwdriver, remove the 2 retainers.

HINT:


Tape the screwdriver tip before use.

(b) Remove the 2 clips and screw, nut and side spoiler.

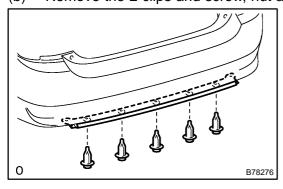

11. REMOVE REAR NO.1 SPOILER

(a) Using a clip remover, remove the 5 clips and No. 1 spoiler.

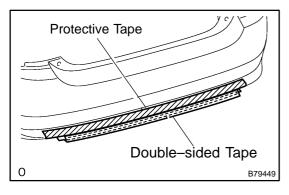

- (b) Put protective tape under the rear bumper.
- (c) Heat the spoiler.

NOTICE:

Do not heat the spoiler excessively.

- (d) Pull off the spoiler No. 1 by cutting the adhesive with a knife.
- (e) Remove the spoiler No.1.

12. INSTALL REAR NO.1 SPOILER

- (a) Clean the bumper surface.
 - (1) Using a heat light, heat the bumper surface.
 - (2) Remove the double-sided tape from the bumper.
 - (3) Wipe off the stains with cleaner.


NOTICE:

Do not heat the spoiler excessively.

(b) If reusing No. 1 spoiler:

Clean the No.1 spoiler.

- (1) Remove the double-sided tape from the No. 1 spoiler.
- (2) Wipe off the stains with cleaner.
- (3) Apply new double-sided tape to the No. 1 spoiler, as shown in the illustration.

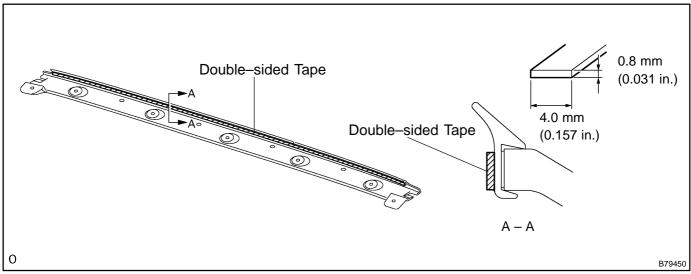

- (c) Install the No. 1 spoiler.
 - (1) Using a heat light, heat the bumper and No. 1 spoiler..
 - (2) Remove the peeling paper from the face of the No. 1 spoiler.

NOTICE:

Do not heat the spoiler excessively.

HINT:

After removing the peeling paper, keep the exposed adhesive free from dirt and other contaminants.


13. INSTALL REAR SIDE LH SPOILER

- (a) Clean the bumper surface.
 - (1) Using a heat light, heat the bumper surface.
 - (2) Remove the double-sided tape from the bumper.
 - (3) Wipe off the stains with cleaner.

NOTICE:

Do not heat the spoiler excessively.


- (b) If reusing side spoiler:
 - (1) Remove the double-sided tape from the No. 1 spoiler.
 - (2) Wipe off the stains with cleaner.
 - (3) Apply new double-sided tape to the side spoiler, as shown in the illustration.

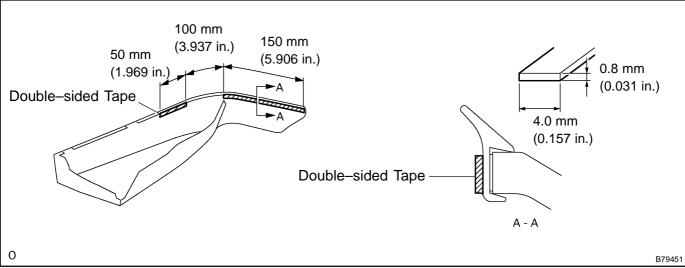

- (c) Install the side spoiler.
 - (1) Using a heat light, heat the bumper and side spoiler.
 - (2) Remove the peeling paper from the face of the side spoiler.

NOTICE:

Do not heat the spoiler excessively.

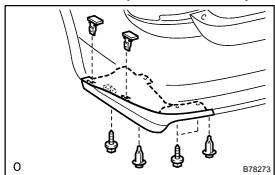

(3) Install the side spoiler with the 2 retainers, 2 clips and 3 screws.

HINT:

After removing the peeling paper, keep the exposed adhesive free from dirt and other contaminants.

14. INSTALL REAR SIDE RH SPOILER

HINT:

Use the same procedures described for the LH side.

2004 Prius - Preliminary Release (RM1075U)

Author: Date: 1087