ENGINE

ON-VEHICLE INSPECTION

9902Q-01

HINT:

Inspect these items on a cooled down engine.

- 1. INSPECT DRIVE BELT (See page 14-5)
- 2. REPLACE SPARK PLUGS (See page 18-3)
- (a) INSPECT AIR FILTER
- (b) Remove the air filter.
- (c) Visually check that the air filter is not excessively damaged, dirty or oily.

Replace the air filter if necessary.

- 3. REPLACE AIR FILTER
- (a) Replace the air filter with a new one.
- 4. REPLACE ENGINE OIL AND OIL FILTER (See page 17-21)
- 5. REPLACE ENGINE COOLANT (See page 16-11)
- 6. INSPECT GASKET IN FUEL TANK CAP (See page 12-9)
- 7. INSPECT FUEL LINES AND CONNECTIONS, FUEL TANK VAPOR VENT SYSTEM HOSES AND FUEL TANK BANDS
- (a) Visually check the fuel lines for cracks, leakage, loose connections, deformation and tank band looseness.
- 8. INSPECT EXHAUST PIPES AND MOUNTINGS
- (a) Visually check the pipes, hangers and connections for severe corrosion, leaks and damage.
- 9. INSPECT VALVE CLEARANCE (See page 14-6)

2004 Prius - Preliminary Release (RM1075U)

Author: Date: 1134