

CD CANNOT BE INSERTED OR IS EJECTED RIGHT AFTER INSERTION

INSPECTION PROCEDURE

1 CHECK IF A NORMAL CD IS INSERTED

- (a) Check if a normal CD is inserted.
- (1) Make sure that the CD is a normal audio CD, and that there is no deformation, flaw, stain, burr or other defects on the CD.

OK: Normal audio CD is installed.

HINT:

- Translucent or oddly-shaped CD cannot be played.
- Computer CD-ROMs (even those with music) and CD-R discs cannot be played.
- Playing an 8-cm CD does not require an adapter.

NG → CD IS FAULTY

OK

2 CHECK IF A CD IS INSERTED PROPERLY


- (a) Check if a CD is inserted properly.
- (1) Check whether or not the CD is inserted upside down.

OK: Not upside down.

NG → SET DISC CORRECTLY

OK

3 DISC CLEANING

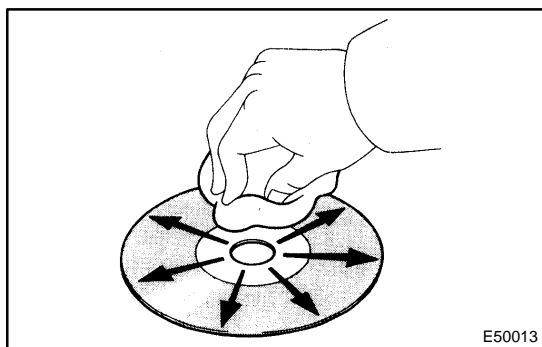

- (a) Disc cleaning
- (1) If the disc gets dirty, clean the disc by wiping the surface from the center to outside in the radial directions with a soft cloth.

NOTICE:

Do not use a conventional record cleaner or anti-static preservative.

OK: Malfunction disappears.

OK → DISC IS DIRTY

NG

4 REPLACE CD WITH ANOTHER AND RECHECK

- (a) Replace the CD with another and recheck.
(1) Replace the CD with another normal one to see if the same trouble occurs again.
OK: Malfunction disappears.

NG**REPLACE RADIO RECEIVER ASSY (SEE PAGE 67-5)****OK****CD IS FAULTY**