


# SPEED SIGNAL ERROR

## INSPECTION PROCEDURE

### 1 NAVIGATION CHECK MODE(VEHICLE SENSORS)

(a) Enter the "Navigation Check" mode (Vehicle Sensors) (see page 05-1859).

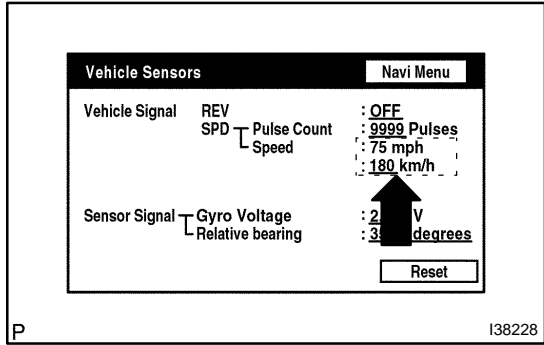

(b) While driving, compare the "SPD" indicator to the reading on the speedometer. Check if these readings are almost the same.

**OK: The readings are almost the same.**

**OK** → **REPLACE NAVIGATION ECU (SEE PAGE 67-23)**

**NG**

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN DIAGNOSTIC TROUBLE CODE CHART (SEE PAGE 05-1888)**