

## PANEL SWITCH DOES NOT FUNCTION

### INSPECTION PROCEDURE

#### 1 CHECK THE PANEL SWITCH

- (a) Check for foreign matter around the switch that might prevent operation.

**OK: No foreign matter is found.**


**NG**

**REMOVE ANY FOREIGN MATTER FOUND**

**OK**

#### 2 DISPLAY CHECK MODE(PANEL SWITCH CHECK MODE)

- (a) Enter the "Display Check" mode (Panel Switch Check Mode) (see page [05-1856](#)).

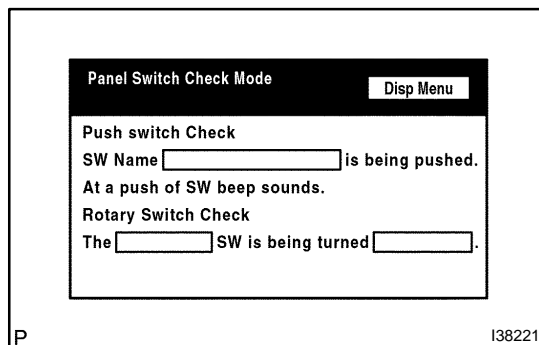

- (b) Operate the abnormal switch and check if the switch name and status are correctly displayed.

**OK: The switch name and status are correctly displayed as operated.**

**OK**

**REPLACE MULTI-DISPLAY  
(SEE PAGE [67-7](#))**

**NG**

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE  
(SEE PAGE [05-1873](#))**