

DIAGNOSTIC TROUBLE CODE CHART

If a trouble code is displayed during the DTC check, check the circuit listed for that code. For details of each code, refer to the "See page" under the respective "DTC No." in the DTC chart.

DTC No. (See page)	Circuit Inspection	Trouble Area
P0500 (05-2698)	Vehicle Speed Sensor "A"	<ul style="list-style-type: none"> • Vehicle speed sensor • Vehicle speed sensor circuit • Combination meter • Hybrid vehicle control ECU
P0571 (05-2702)	Brake Switch "A" Circuit	<ul style="list-style-type: none"> • Stop lamp switch • Stop lamp switch circuit • Hybrid vehicle control ECU
P0607 (*1) (05-2707)	Control Module Performance	<ul style="list-style-type: none"> • Hybrid vehicle control ECU

HINT:

*1: DTC P0607 indicates an internal abnormality of the hybrid vehicle control ECU. If this DTC is output, replace the hybrid vehicle control ECU.