

## DATA LIST/ACTIVE TEST

### 1. DATA LIST

#### HINT:

Using the hand-held tester DATA LIST allows switch, sensor, actuator and other item values to be read without removing any parts. Reading the DATA LIST early in troubleshooting is one way to shorten labor time.

- (a) Connect the hand-held tester (with CAN VIM) to the DLC3.
- (b) Turn the the power switch ON (IG).
- (c) Read the DATA LIST according to the display on the tester.

#### Standard:

#### Multiplex network body ECU:

Item	Measurement Item/ Display (Range)	Normal Condition	Diagnostic Note
D DOR CTY SW	Driver side door courtesy switch signal/ON or OFF	ON: Driver side door is open OFF: Driver side door is closed	–
P DOR CTY SW	Passenger side door courtesy switch signal/ON or OFF	ON: Passenger side door is open OFF: Passenger side door is closed	–