

JAM PROTECTION FUNCTION DOES NOT OPERATE

CIRCUIT DESCRIPTION

The power window regulator master switch assembly controls the driver side power window regulator motor. The jam protection function only operates within a specified range during AUTO UP operation or key-off manual UP operation.

HINT:

The jam protection function is only available on the driver side power window.

INSPECTION PROCEDURE

1 RESET POWER WINDOW REGULATOR MOTOR

- (a) Reset the power window regulator motor (see page [05-2028](#)).
- (b) Check if the power window AUTO UP/DOWN function operates normally.

OK: AUTO UP/DOWN function operates normally.

NG

OTHER PROBLEM (See page [05-2029](#))

OK

2 CHECK JAM PROTECTION FUNCTION OPERATING RANGE

- (a) Check that the jam protection function operates normally (see page [05-2063](#)).

HINT:

The jam protection function does not operate from the fully closed position of the door glass to 4 mm (0.16 in.) below that.

NG

REPLACE POWER WINDOW REGULATOR MASTER SWITCH ASSY

OK

END