

## PROBLEM SYMPTOMS TABLE

Proceed to the reference page shown in the table below for each malfunction symptom and troubleshoot each circuit.

### HINT:

The theft deterrent system is based on the premise that the power door lock control system and the wireless door lock control system are operating normally. Check these systems first before troubleshooting the theft deterrent system.

Symptom	Suspected Area	See Page
Theft deterrent system cannot be set*	<ol style="list-style-type: none"> <li>1. Security indicator circuit</li> <li>2. ECU power source circuit</li> <li>3. Unlock warning switch circuit</li> <li>4. Door key lock and unlock switch</li> <li>5. Door courtesy switch circuit</li> <li>6. Back door courtesy switch circuit</li> <li>7. Engine hood courtesy switch circuit</li> </ol>	<a href="#">05–2511</a> <a href="#">05–2509</a>  <a href="#">05–1733</a> <a href="#">05–1729</a> <a href="#">05–2119</a> <a href="#">05–2520</a>
Security indicator does not blink when power switch is changed from ON (IG) to OFF 10 times within 15 seconds *	<ol style="list-style-type: none"> <li>1. Security indicator circuit</li> </ol>	<a href="#">05–2511</a>
Alarm sounding state cannot be canceled even when key is inserted into key slot, hybrid system is started and acceleration pedal is pushed for 10 seconds*	<ol style="list-style-type: none"> <li>1. Ignition circuit</li> <li>2. Unlock warning switch circuit</li> </ol>	<a href="#">05–2511</a>
Theft deterrent system can be set even when door is open	<ol style="list-style-type: none"> <li>1. Door courtesy switch circuit</li> </ol>	<a href="#">05–1729</a>
Horns (low pitched, high pitched) do not sound while theft deterrent system is in warning operation	<ol style="list-style-type: none"> <li>1. Horn (low pitched, high pitched) circuit</li> </ol>	<a href="#">05–2522</a>
Headlamps do not flash while theft deterrent system is in warning operation	<ol style="list-style-type: none"> <li>1. Headlamp circuit</li> </ol>	<a href="#">05–1697</a>
Taillamps do not flash while theft deterrent system is in warning operation	<ol style="list-style-type: none"> <li>1. Taillamp circuit</li> </ol>	<a href="#">05–1710</a>
Hazard warning lamps do not flash while theft deterrent system is in warning operation	<ol style="list-style-type: none"> <li>1. Hazard warning circuit</li> </ol>	<a href="#">05–1746</a>
Room lamp does not illuminate while theft deterrent system is in warning operation	<ol style="list-style-type: none"> <li>1. Room lamp circuit</li> </ol>	<a href="#">05–1704</a>
Security horn does not sound while theft deterrent system is in warning operation	<ol style="list-style-type: none"> <li>1. Security horn circuit</li> </ol>	<a href="#">05–2511</a>
Headlamps flash even when theft deterrent system is not set	<ol style="list-style-type: none"> <li>1. Headlamp circuit</li> </ol>	<a href="#">05–1697</a>
Taillamps flash even when theft deterrent system is not set	<ol style="list-style-type: none"> <li>1. Taillamp circuit</li> </ol>	<a href="#">05–1710</a>
Hazard warning lamps flash even when theft deterrent system is not set	<ol style="list-style-type: none"> <li>1. Hazard warning switch circuit</li> </ol>	<a href="#">05–1746</a>
Room lamp illuminates even when theft deterrent system is not set	<ol style="list-style-type: none"> <li>1. Room lamp circuit</li> </ol>	<a href="#">05–1704</a>

### HINT:

\*: For these symptoms, if the suspected areas are found to be functioning normally, replace the instrument panel J/B assy.